

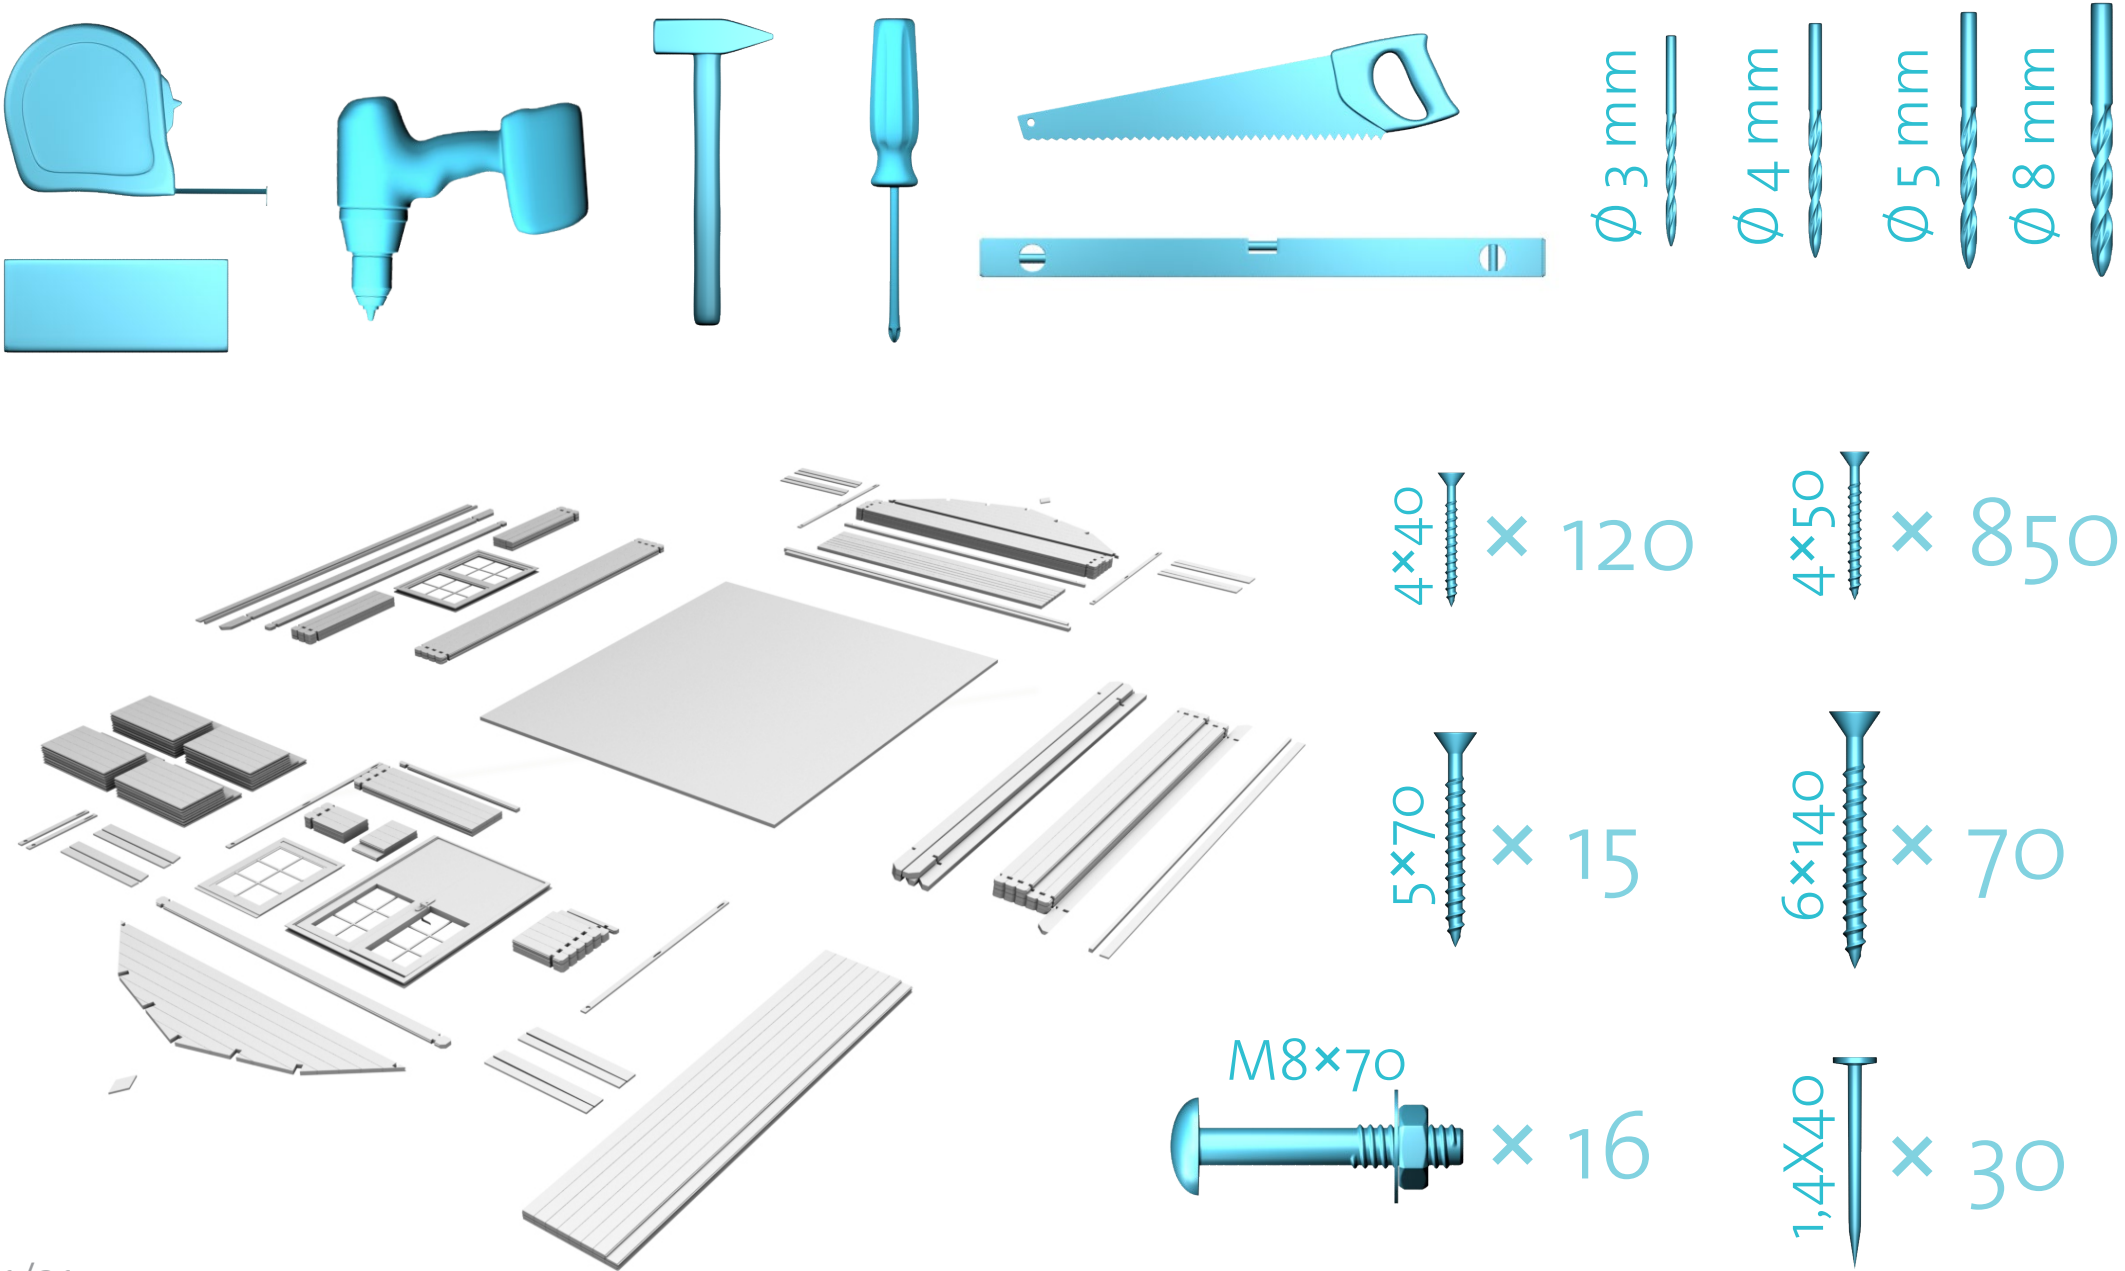


PREPARE THE GROUND, UNWRAP THE PACKAGE,
LAY OUT THE COMPONENTS, FIND THE TOOLS.



GNESTA 40

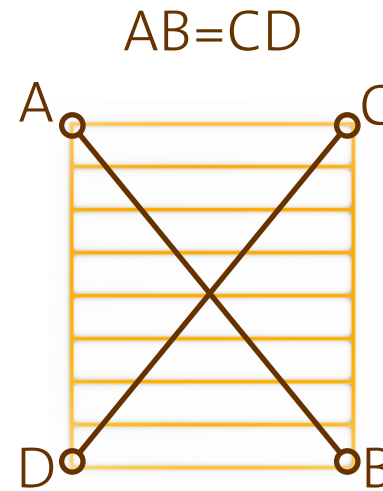

LAY OUT THE FOUNDATION BEAMS
AND SQUARE IT BY MEASURING
FROM CORNER TO CORNER.

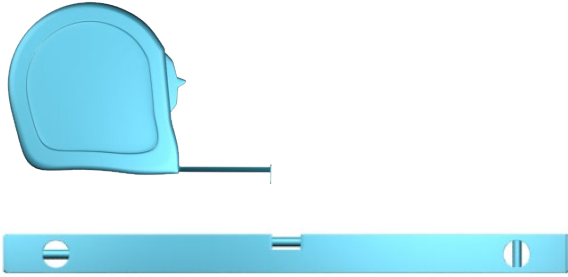

GNESTA 40

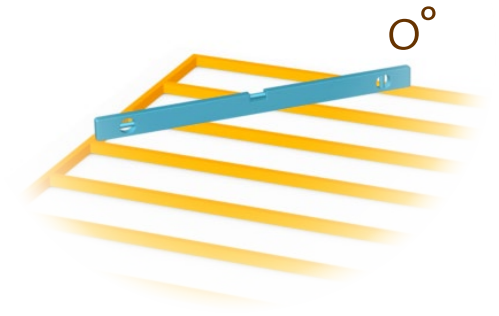
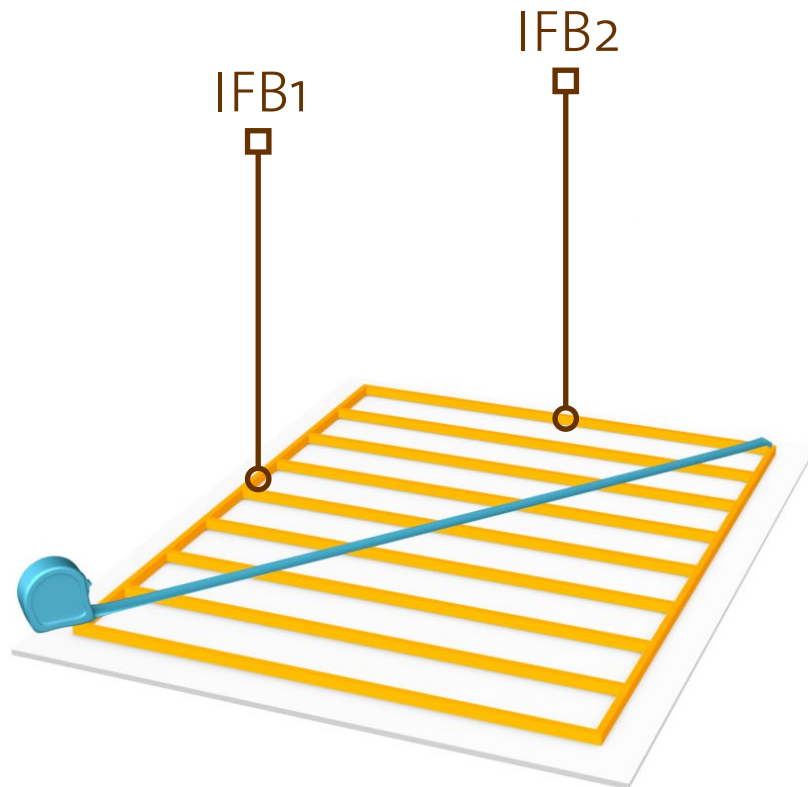


MAKE SURE THAT THE FOUNDATION
IS INSTALLED ON A LEVEL SURFACE.
CHECKING ALL DIRECTIONS,
INCLUDING CORNER TO CORNER. 3%

LAY OUT THE FOUNDATION BEAMS
AND SQUARE IT BY MEASURING
FROM CORNER TO CORNER.

6x140
× 18



GNESTA 40

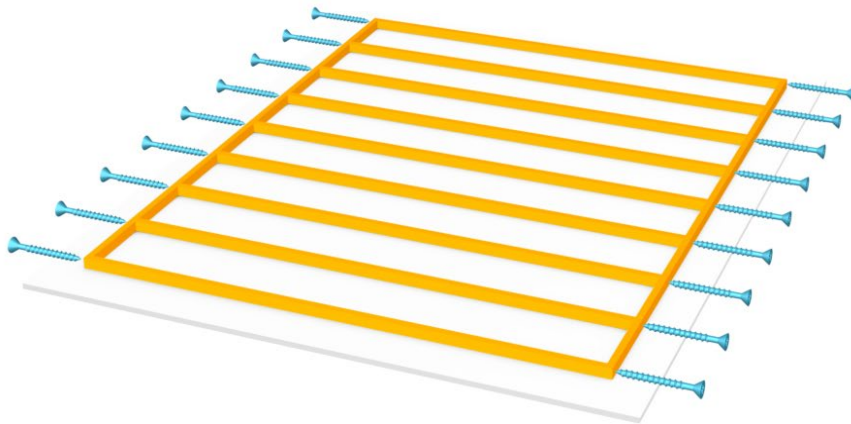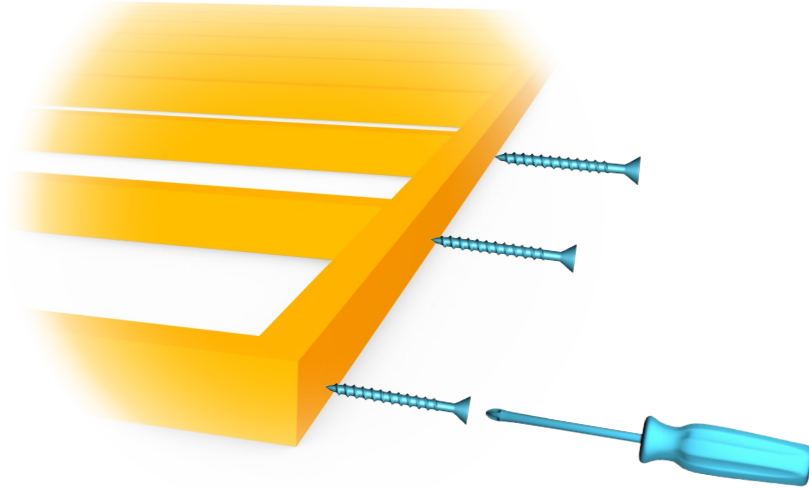

LAY OUT THE **BOTTOM** LOGS,
ATTACH TO THE FOUNDATION.

GNESTA 40

$5 \times 70 \times 4$ $6 \times 140 \times 10$
 $\varnothing 4 \text{ mm}$ $\varnothing 5 \text{ mm}$


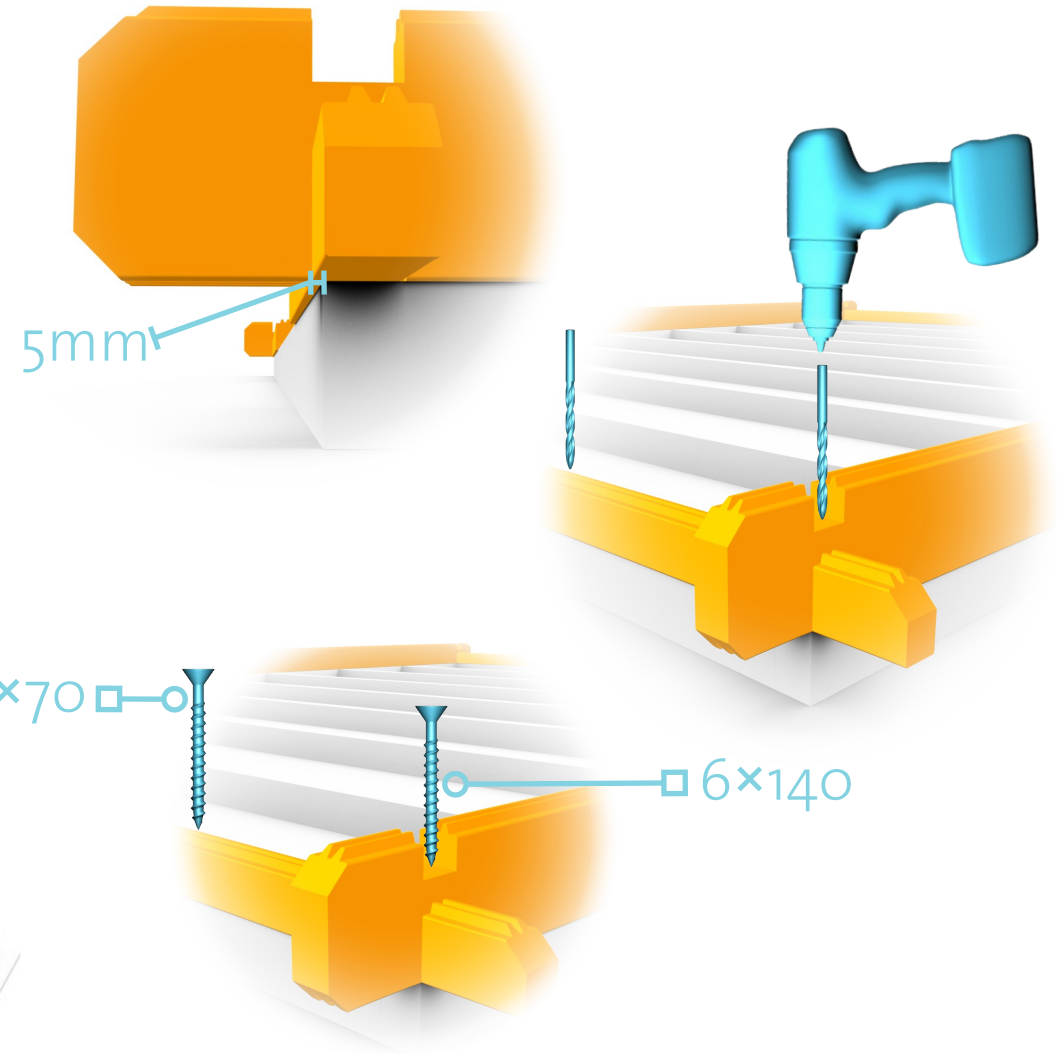
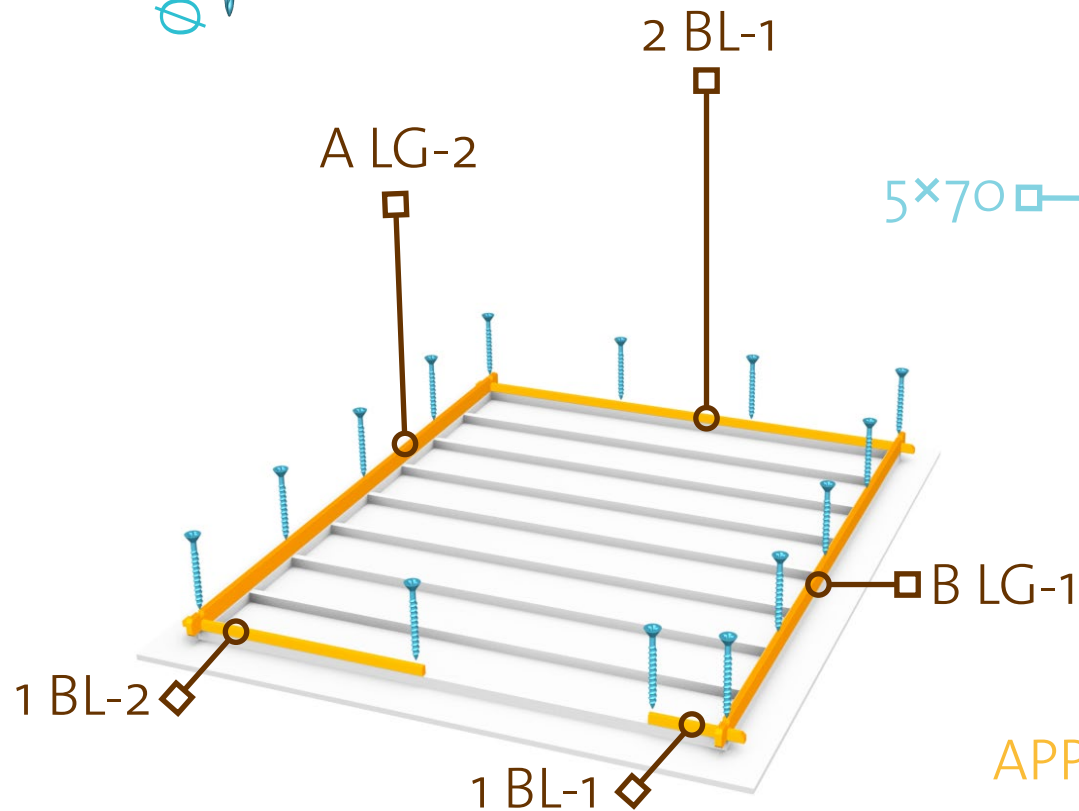


THE WALL **LOGS** WILL HANG OVER
THE FOUNDATION **BEAMS** BY
APPROXIMATELY 5MM. THIS OVERHANG
IS DESIGNED AS A RAIN DRIP. **5%**

ATTACH THE FIRST ROW OF
WALL LOGS INTO THE BOTTOM
LOGS WITH SCREWS.


5x70 × 4 6x140 × 4
Ø 4 mm Ø 5 mm

GNESTA 40

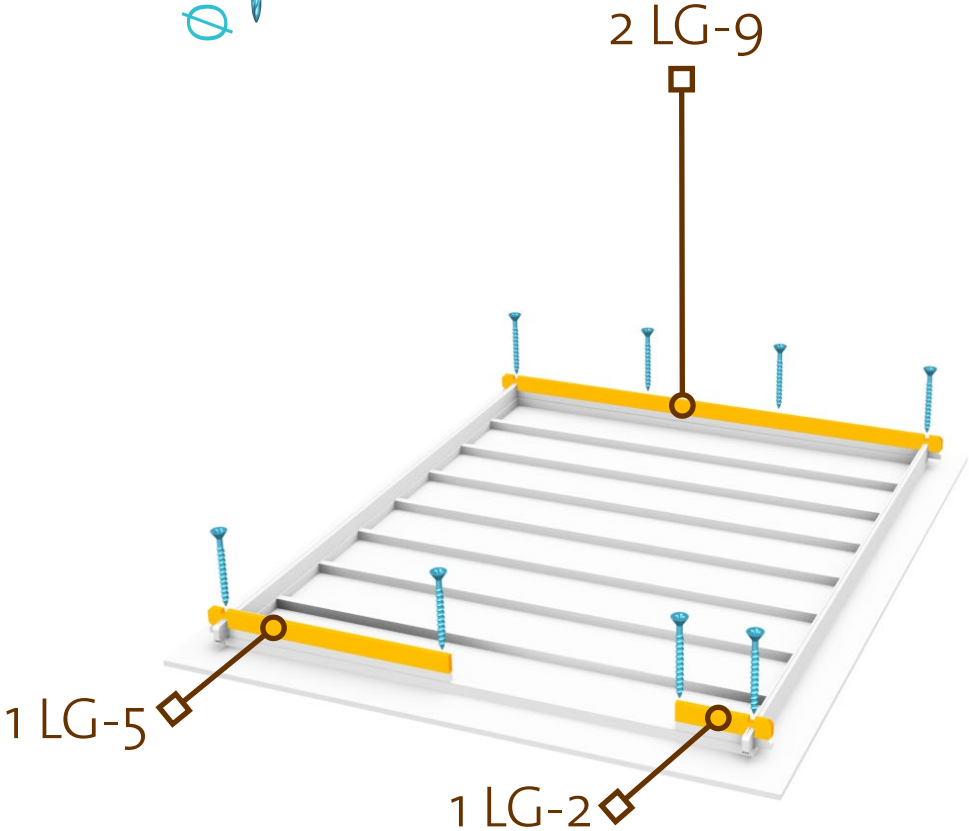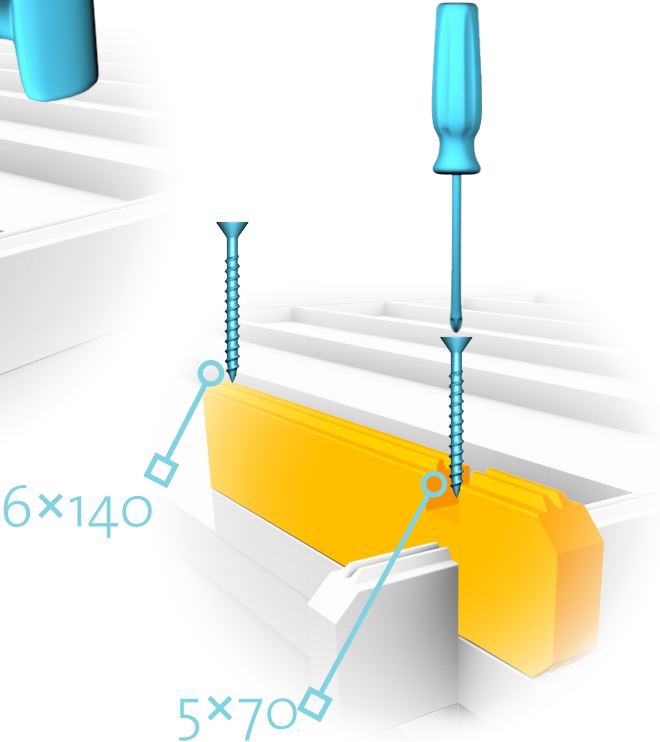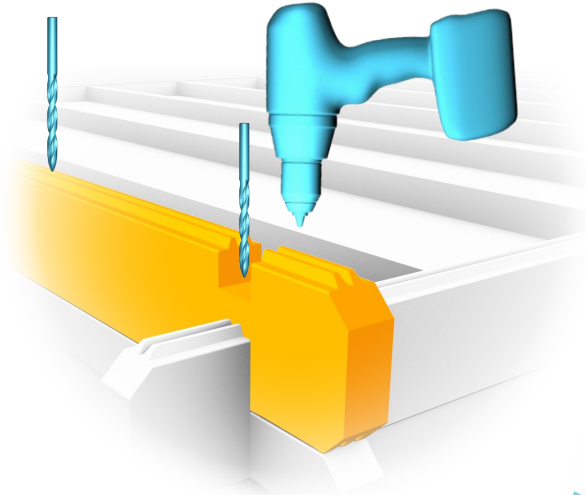



AFTER PLACING 3-4 ROWS OF WALL LOGS, TAP EACH WALL LOG IN PLACE USING A HAMMER AND THE HITBLOCK PROVIDED, TO TIGHTEN THE LOGS.

GNESTA 40

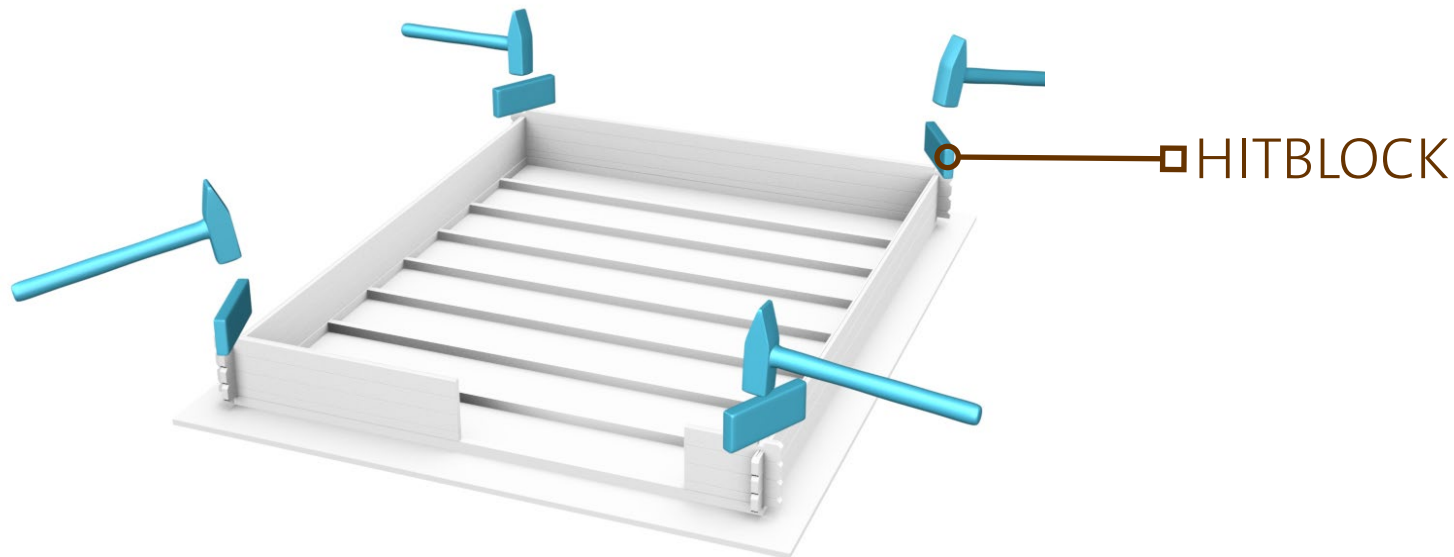


SLIDE THE DOOR IN,
ATTACH THE HANDLE.

GNESTA 40

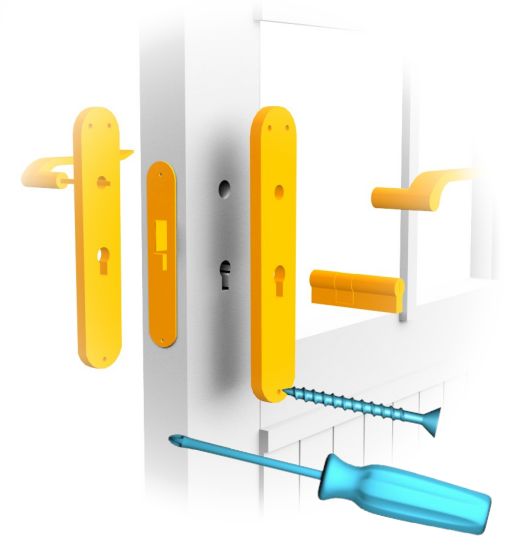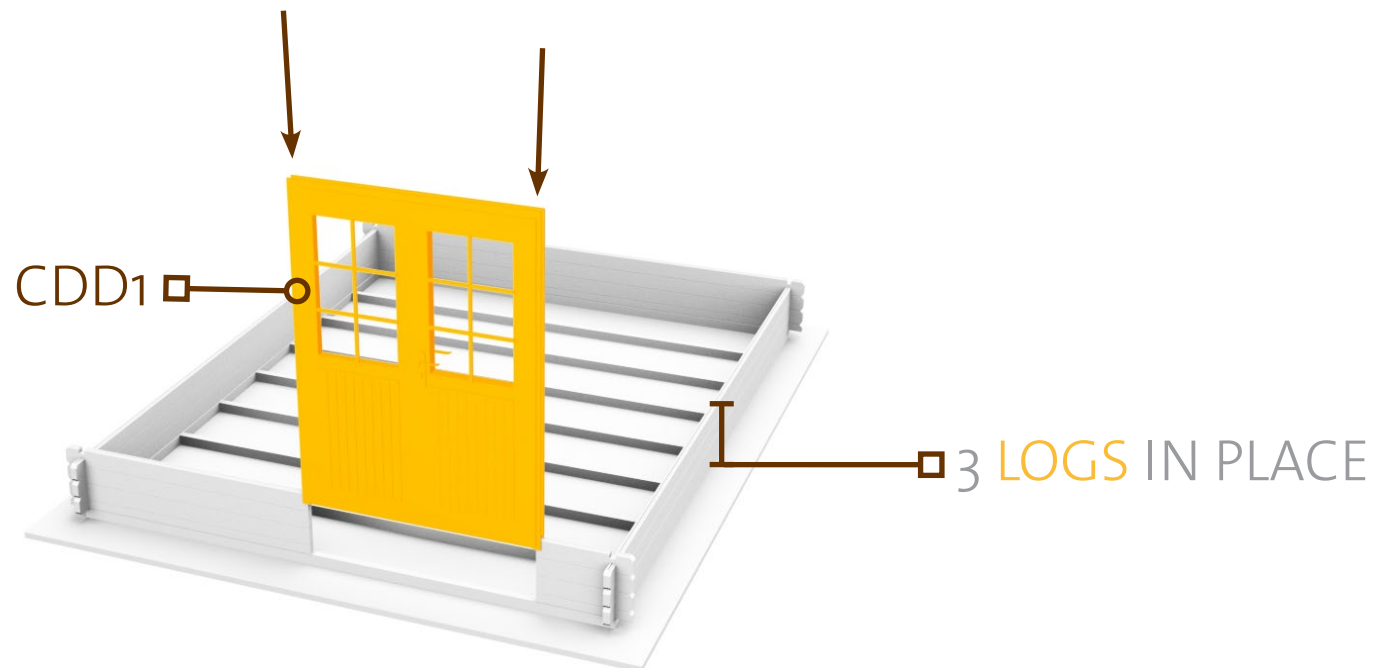


DON`T FORGET TO
TIGHTEN THE LOGS AFTER
EVERY 3-4 ROWS.

GNESTA 40

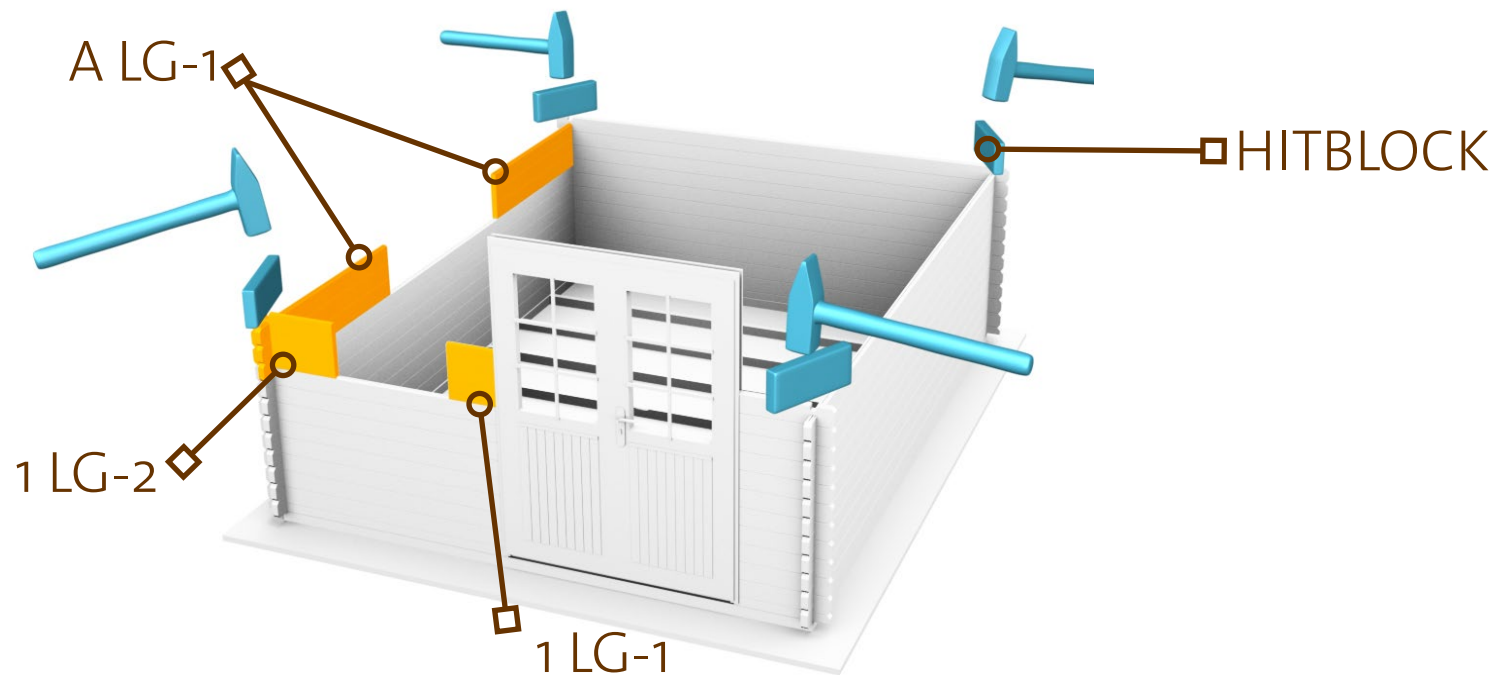

SLIDE THE WINDOW IN,
ATTACH THE HANDLE.

GNESTA 40

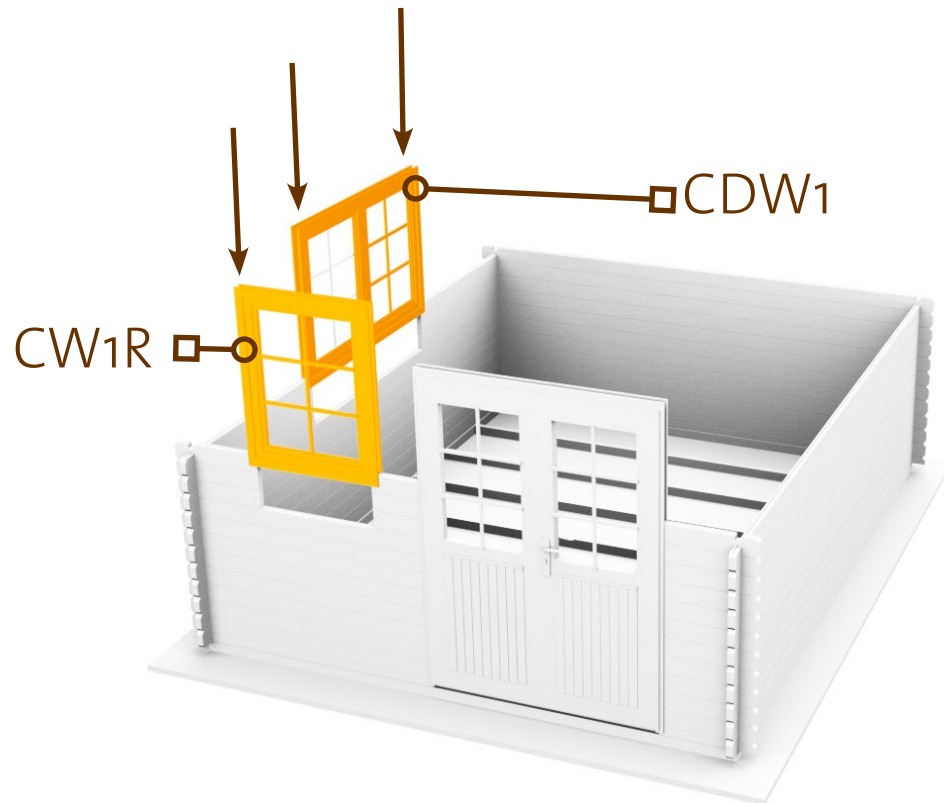


INSTALL THE GABLES WITH LONG SCREWS
TO THE WALL LOGS ON THE FRONT AND
REAR WALLS.

GNESTA 40

6x140
× 8


Ø 5 mm

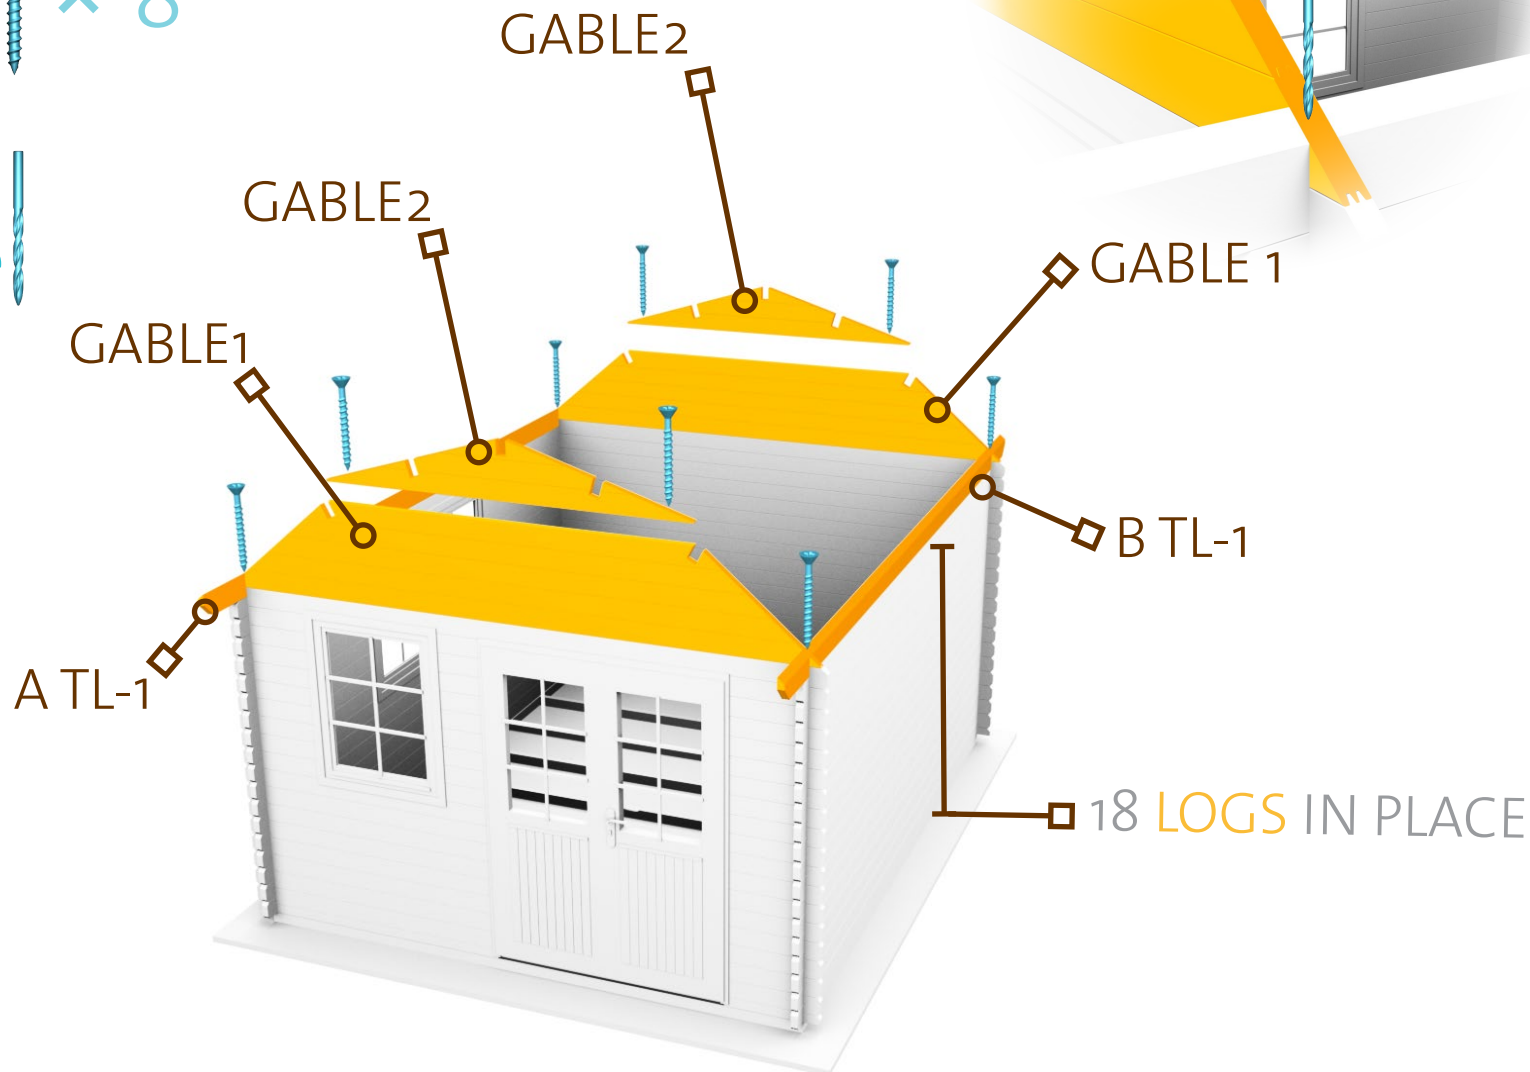



INSTALL THE **ROOF** PURLINS AND
ROOF ELEMENTS 1, **ATTACH** THEM
WITH SCREWS.

6x140
× 10

Ø 5 mm

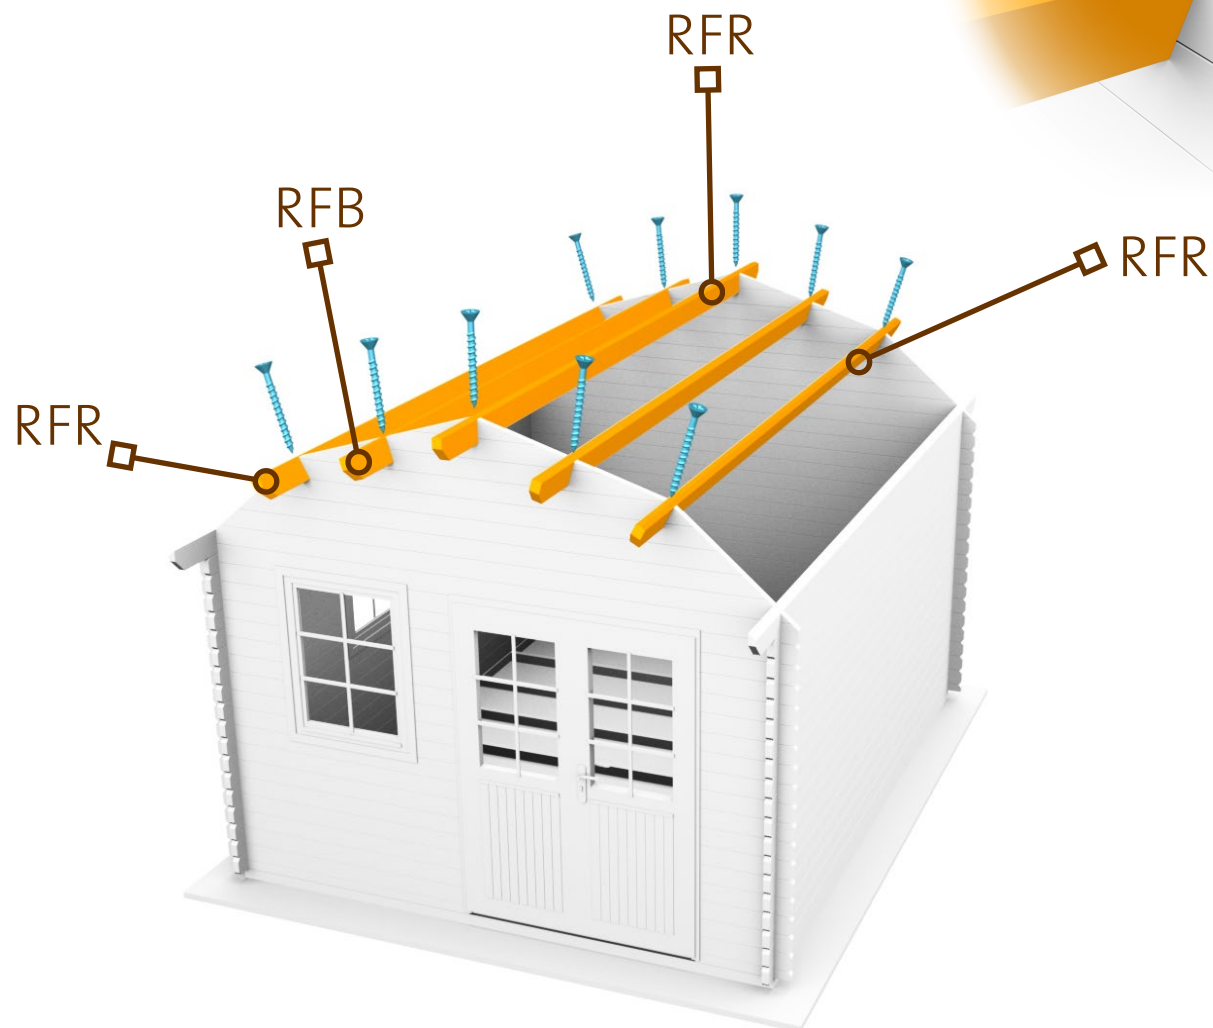




GNESTA 40

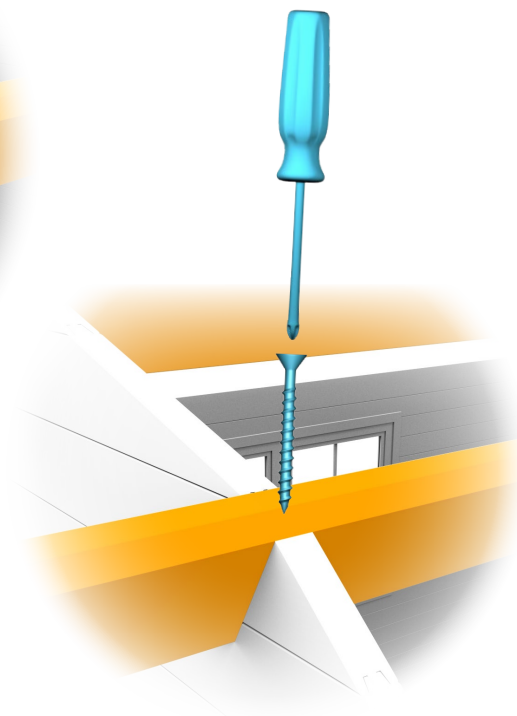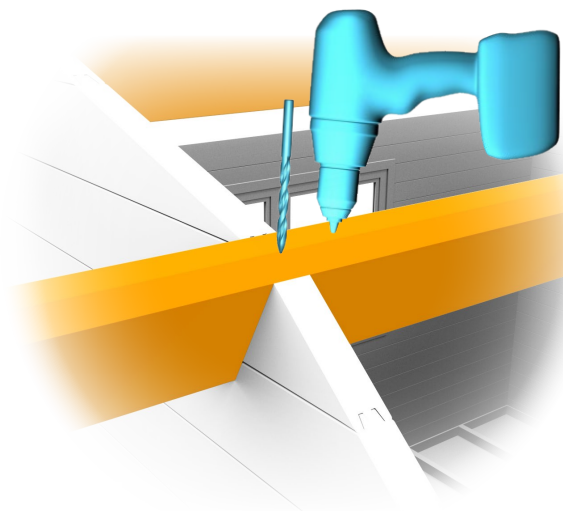

PLACE THE FIRST **ROOFBOARD** FLUSH WITH THE END OF THE **PURLINS** AND ATTACH WITH **SCREWS**. SAW THE LAST **BOARD** TO MAKE IT FIT.

GNESTA 40


4x50
× 475

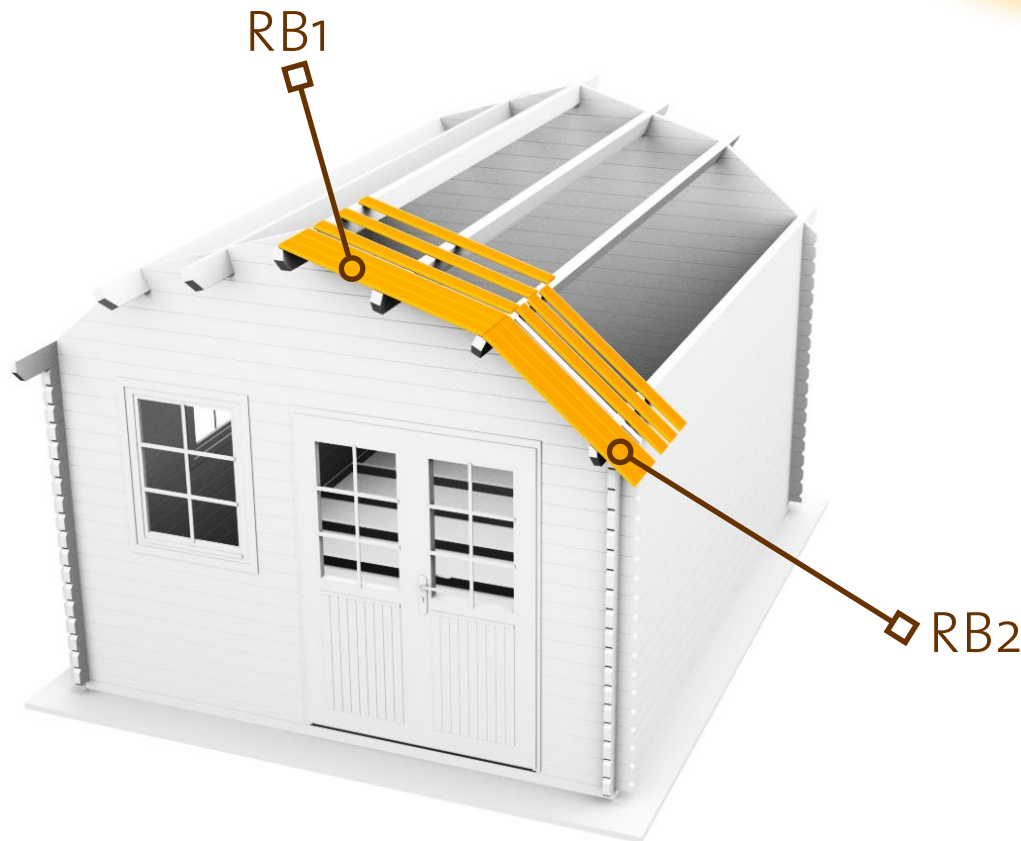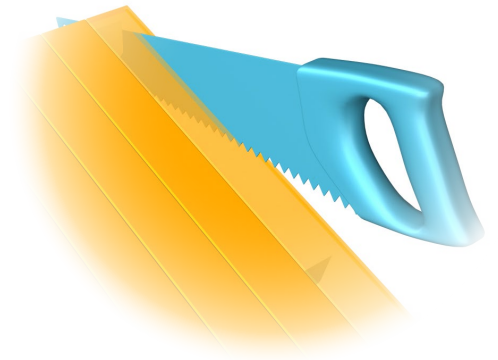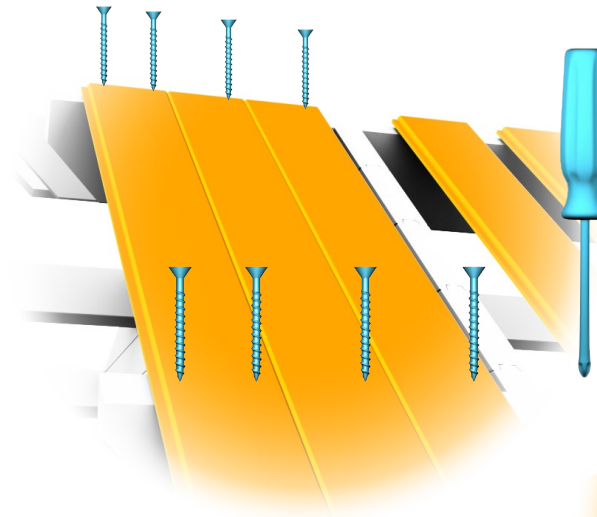

FOR THE FASCIA TRIMS INSERT
SCREWS AFTER EVERY 0,5 METERS.

GNESTA 40

4x40
× 44


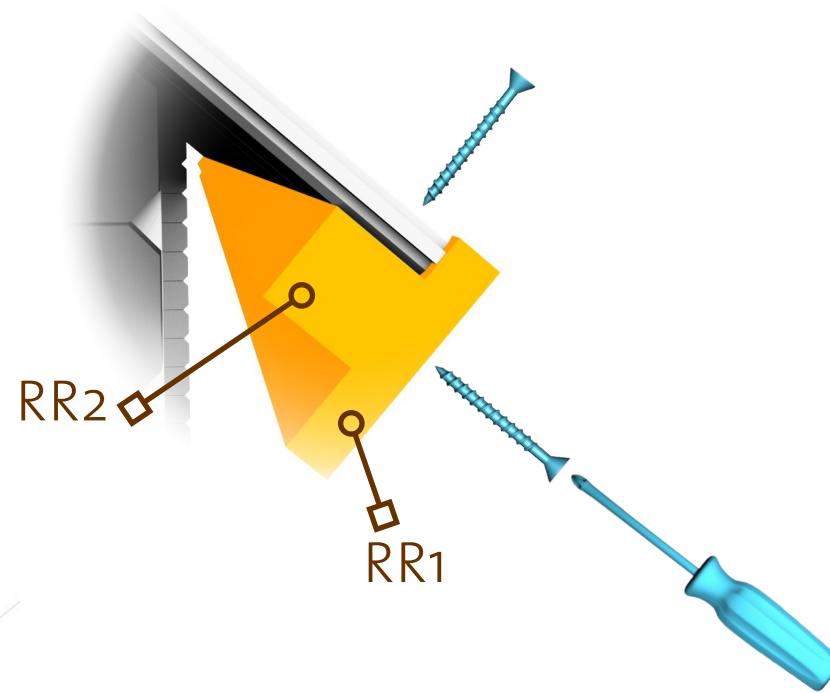


EAVES EDGES GO ON TOP
OF THE ROOFING*.

*(NOT INCLUDED).

4x40 × 52

Ø 3 mm

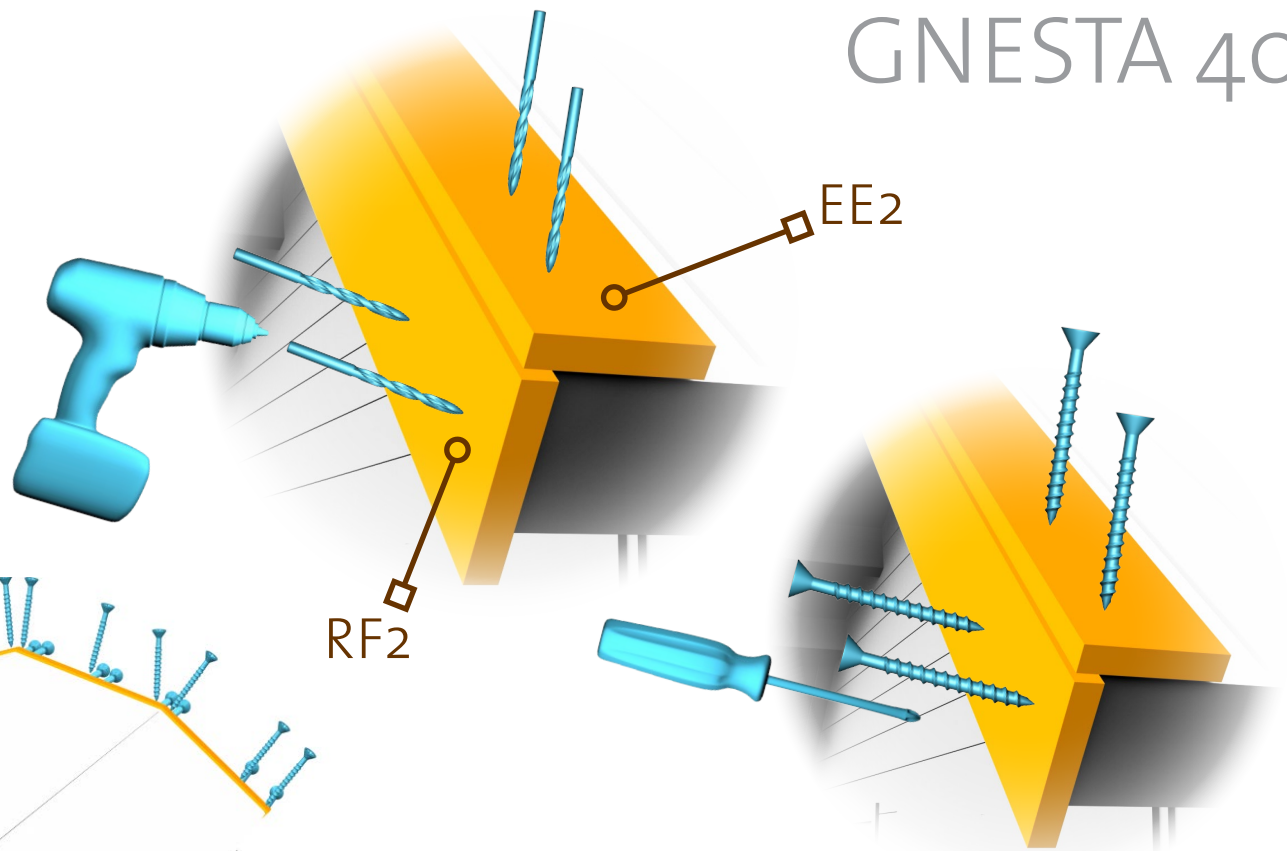
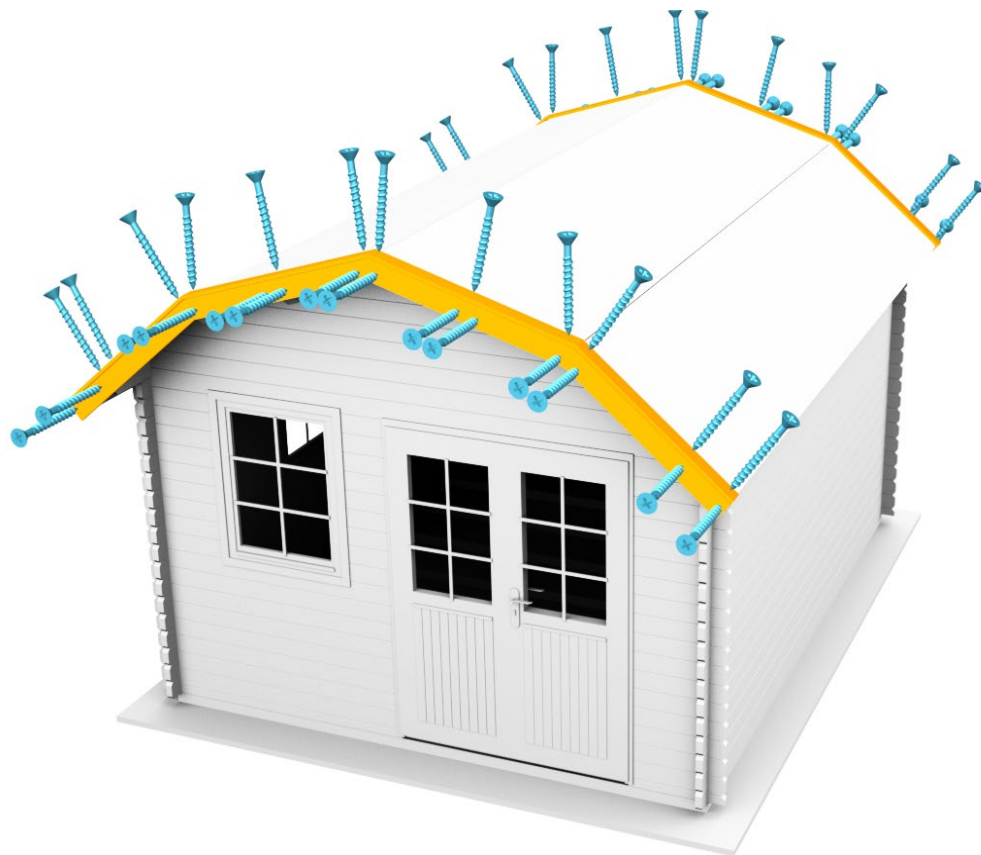


GNESTA 40

ATTACH ROMBS WITH SCREWS.

GNESTA 40


4×40
 $\times 4$
 $\varnothing 3 \text{ mm}$

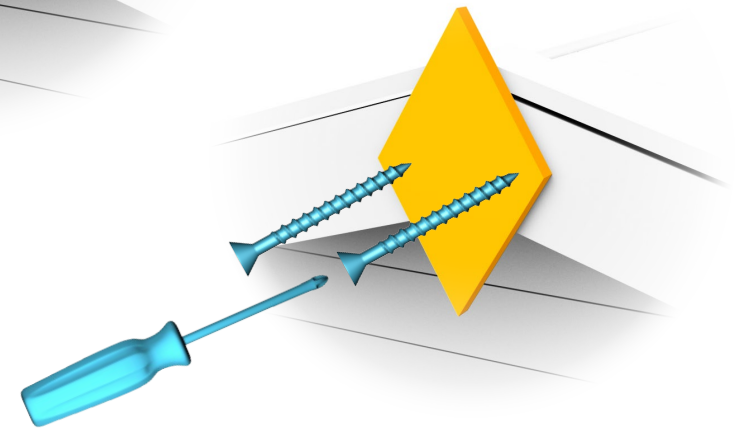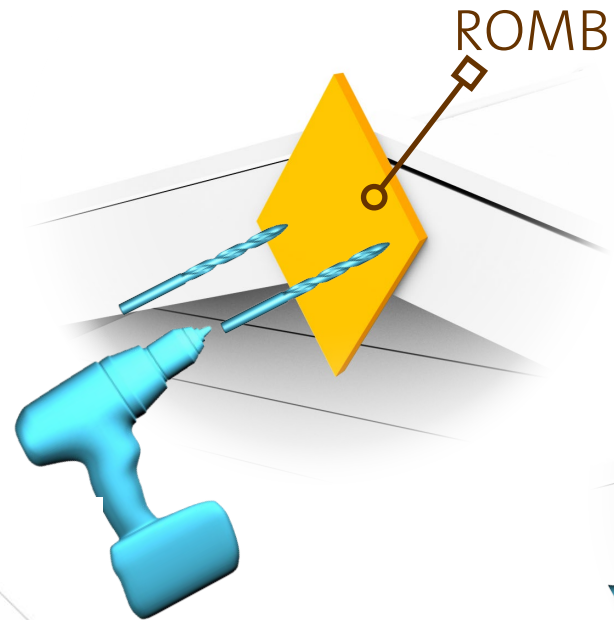

18 SCREWS INTO THE FIRST FLOORBOARD,
9 INTO EACH NEXT, SAW THE
LAST BOARD TO MAKE IT FIT.

4x50 × 297


Ø 3 mm

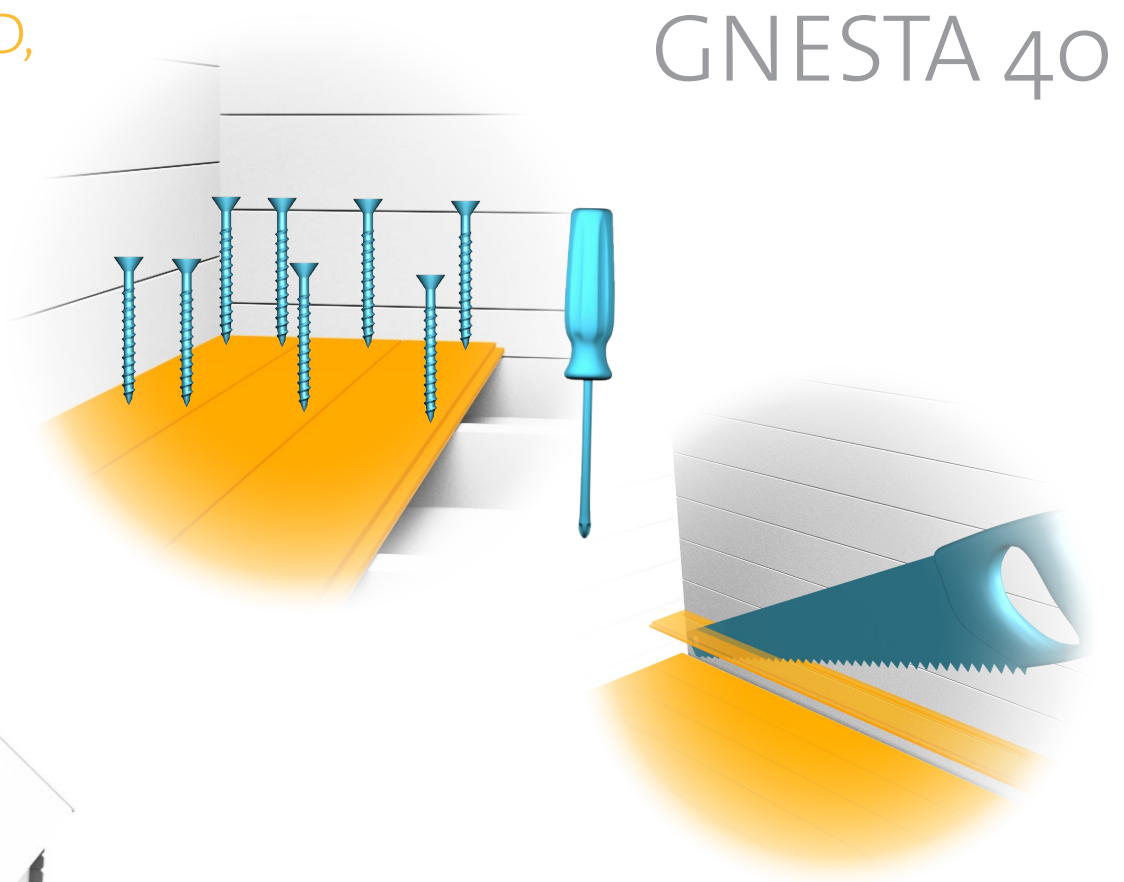



GNESTA 40

SAW THE **BASEBOARDS**
AND ATTACH WITH NAILS
AT **EVERY 0,5** METERS.

1,4X40
× 30

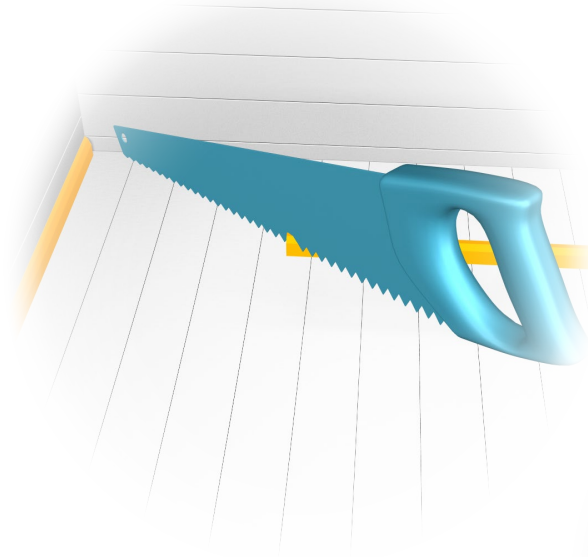

GNESTA 40

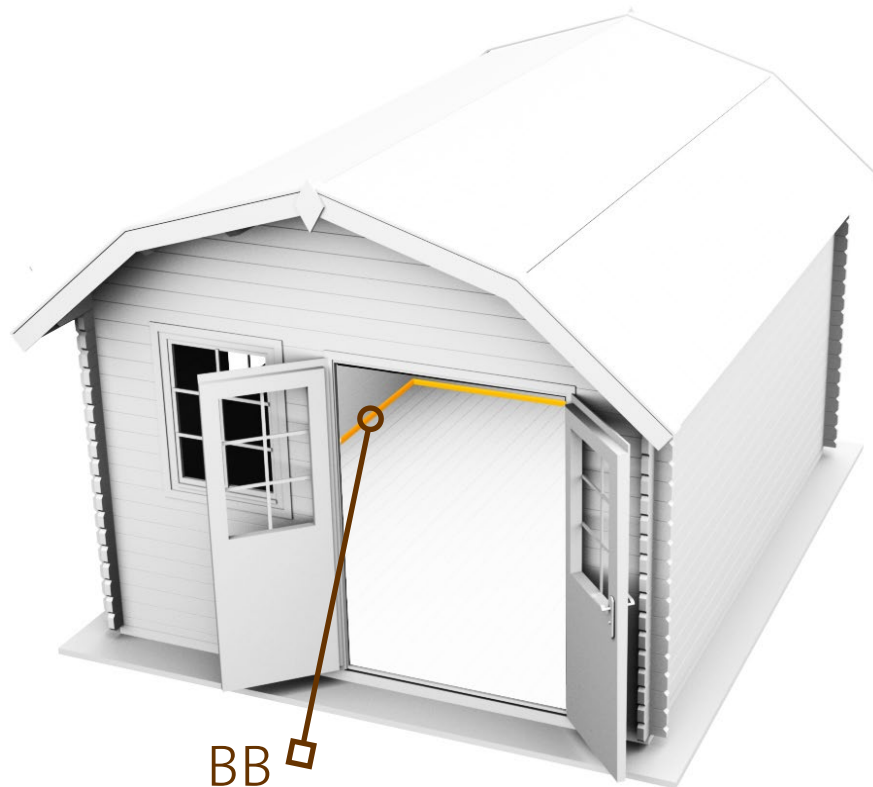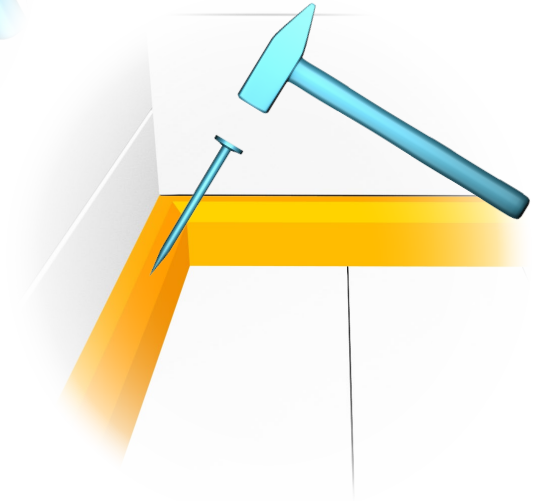


BB


DRILL THROUGH THE WALL, HOLE MUST
BE AT THE BOTTOM OF THE OVAL,
ATTACH WITH BOLT.

M8x70 × 16

Ø 8 mm


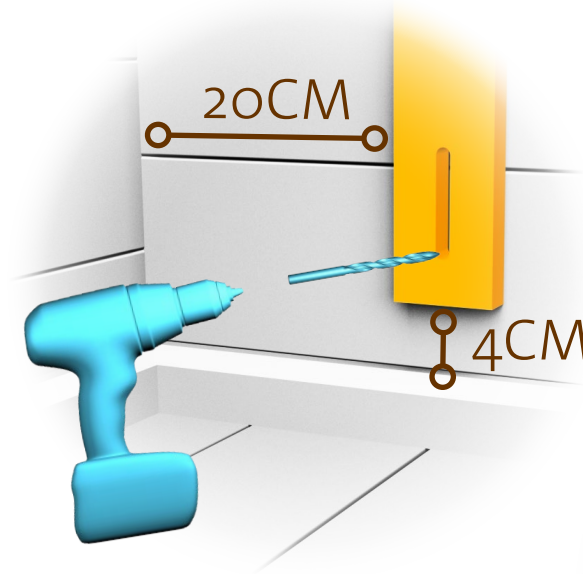


GNESTA 40

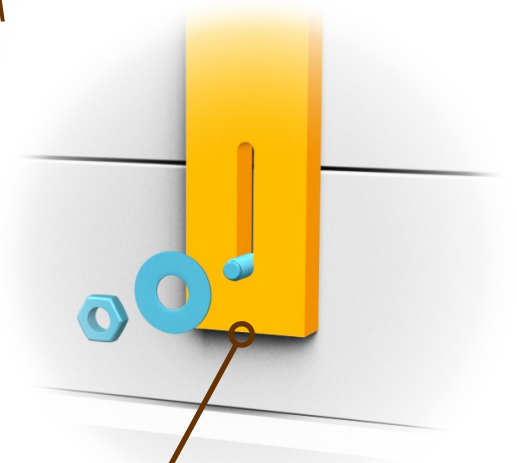


IF DOOR IS TILTED,
PUSH THE DOOR FRAME SO
THAT ALL CORNERS ARE 90° .

GNESTA 40

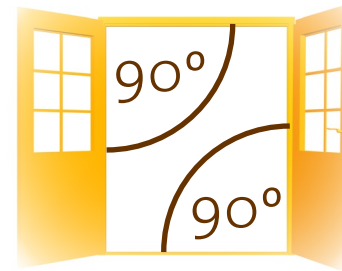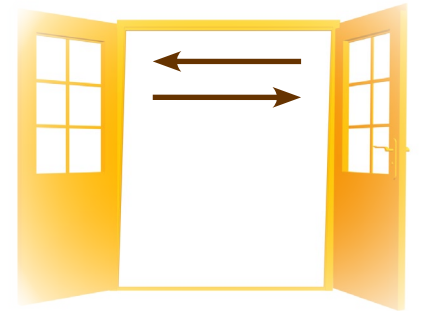

IF **DOORS** ARE IN DIFFERENT HEIGHTS
OR THERE IS A GAP **BETWEEN** THEM,
ADJUST 3 SCREWS ON DOOR HINGES.

GNESTA 40

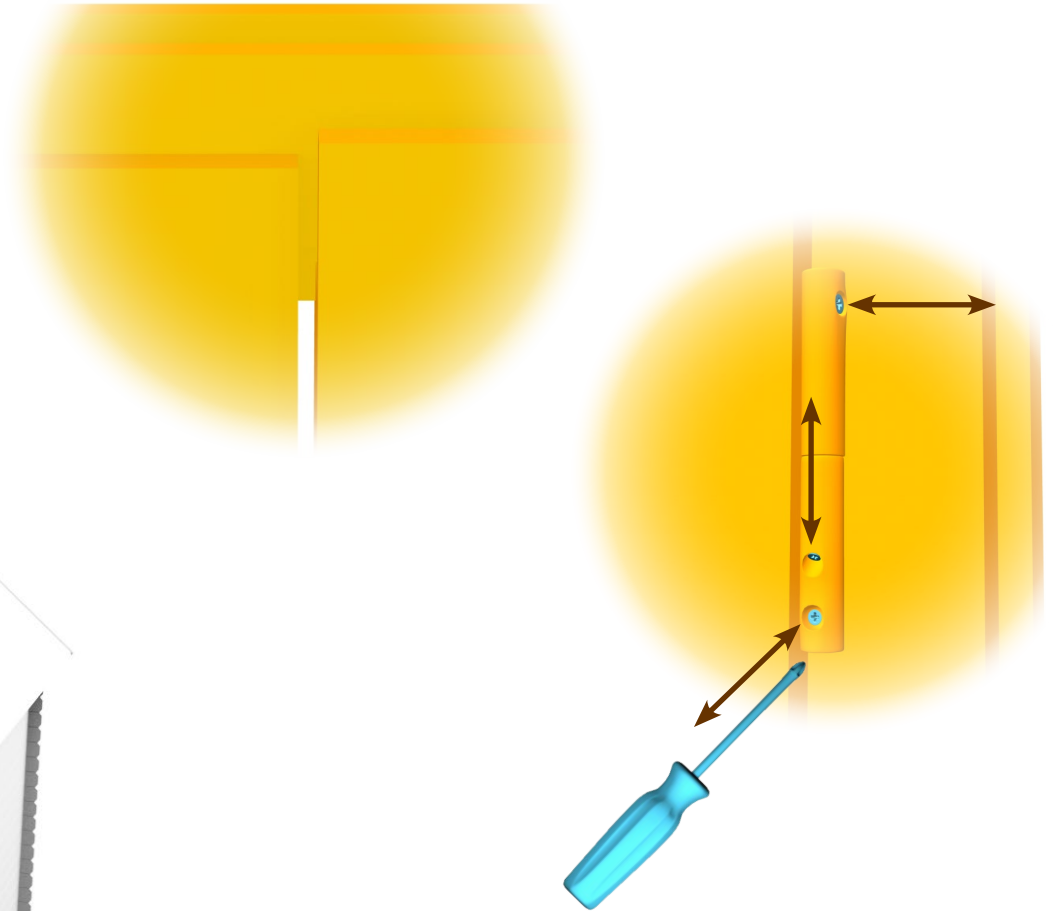

WHEN THE **HOUSE** IS ASSEMBLED, YOU SHOULD **COVER** THE TIMBER WITH **WOOD** PROTECTIVE SEAL, PAINT OR **STAIN** AS SOON AS POSSIBLE TO AVOID DETERIORATION TO THE **WOOD**.

GNESTA 40

