
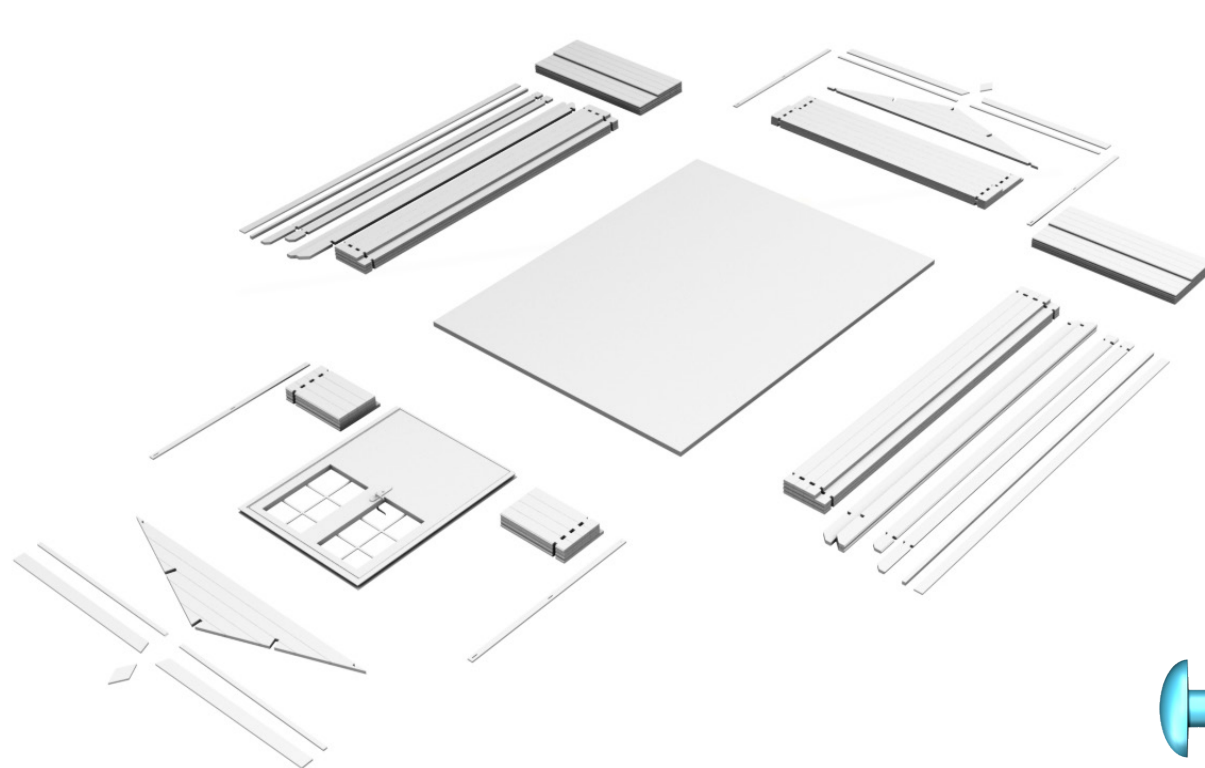


PREPARE THE GROUND, UNWRAP THE PACKAGE,
LAY OUT THE COMPONENTS, FIND THE TOOLS.

OSTO LEIPZIG 34

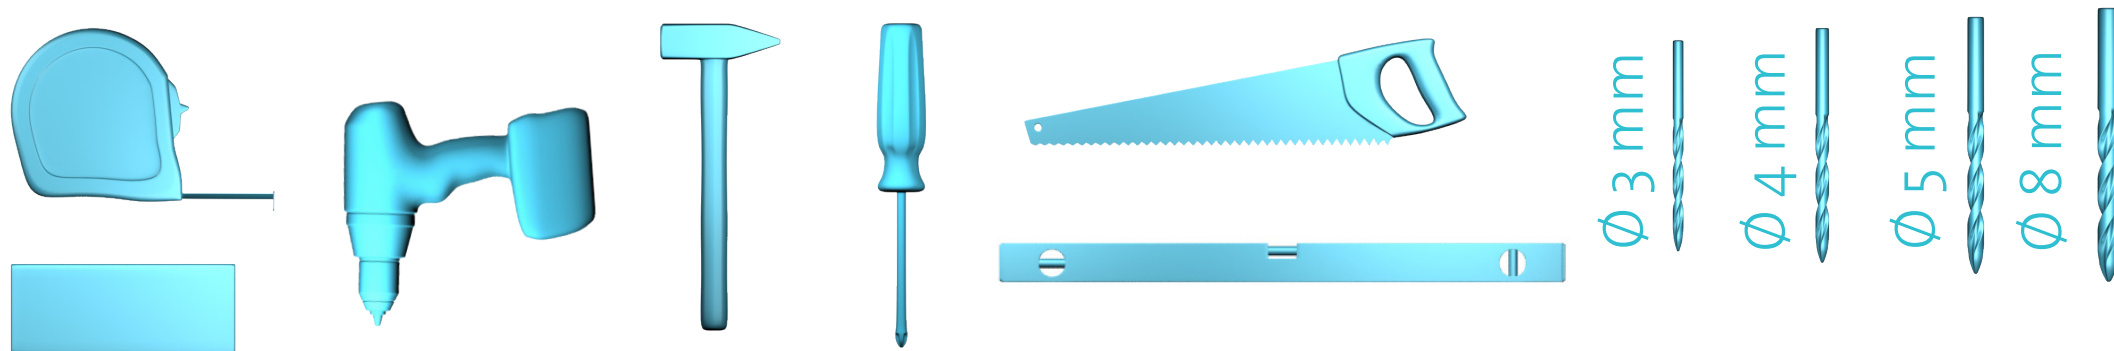

4x40 × 90


4x50 × 270

5x70 × 15



6x140 × 15

M8x70 × 12

LAY OUT THE **BOTTOM** LOGS
AND **SQUARE** IT BY MEASURING
FROM CORNER TO **CORNER**.

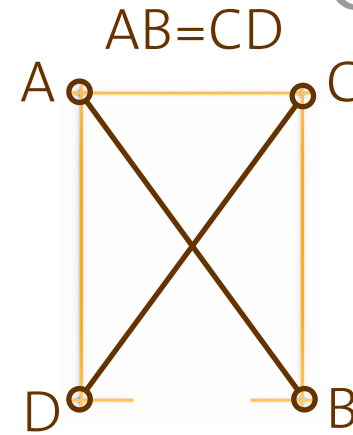

OSTO LEIPZIG 34


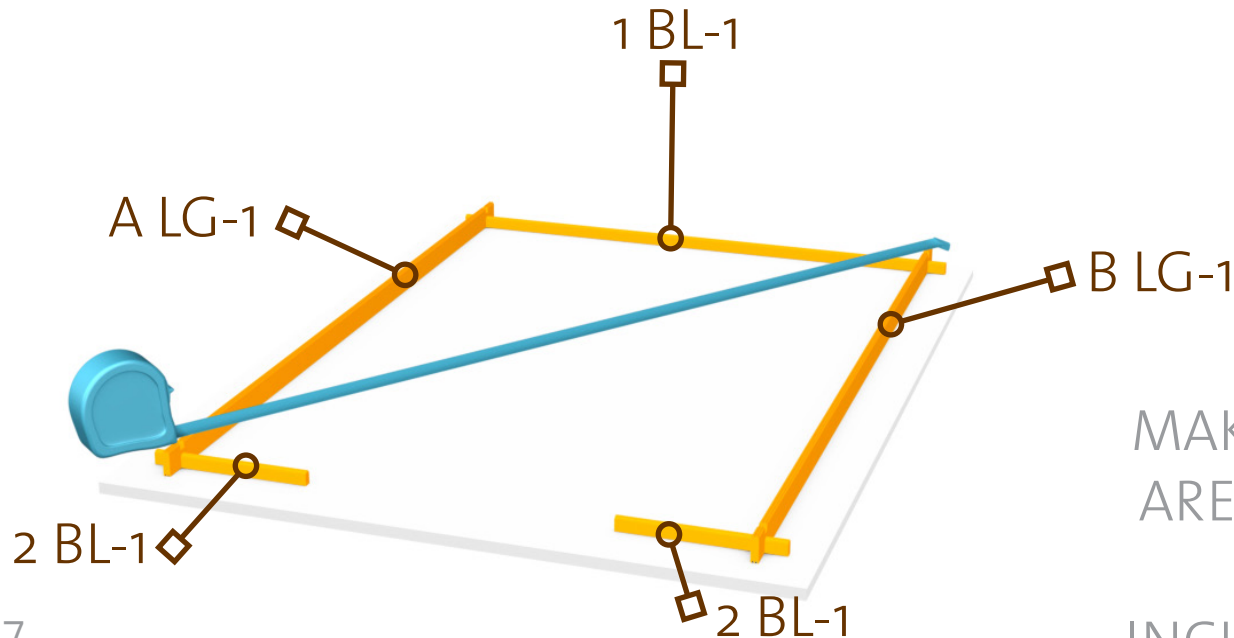
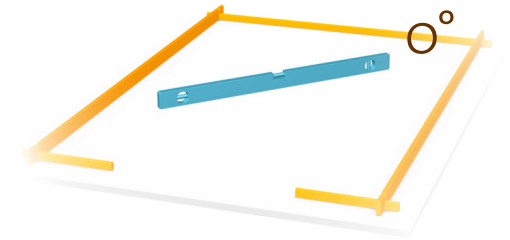


MAKE **SURE** THAT THE BOTTOM LOGS
ARE INSTALLED ON A **LEVEL** SURFACE.
CHECKING ALL DIRECTIONS,
INCLUDING **CORNER** TO CORNER. **2%**

ATTACH THE LOGS
WITH SCREWS.





5x70 × 4
Ø 4 mm

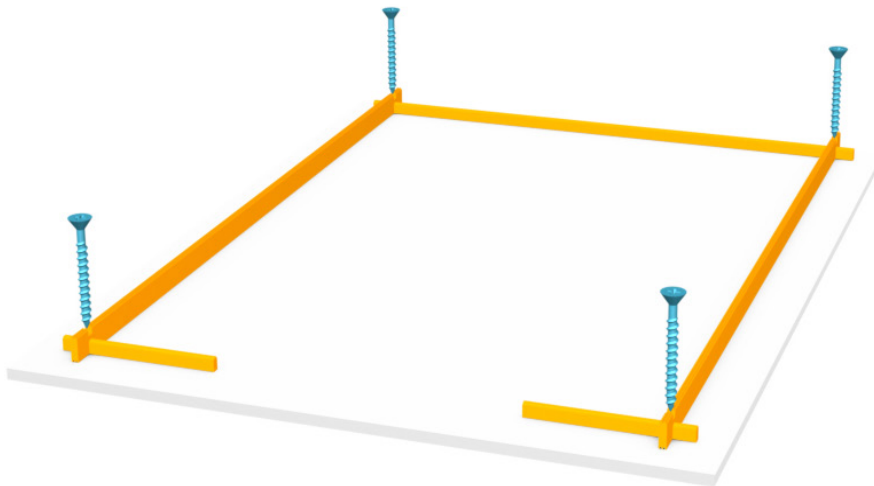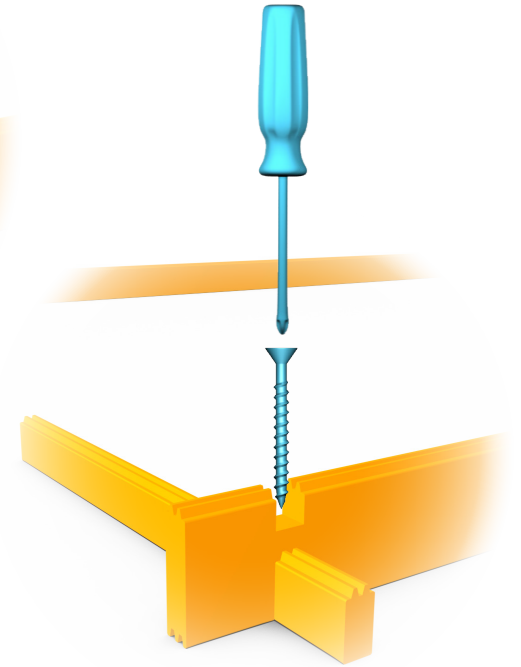
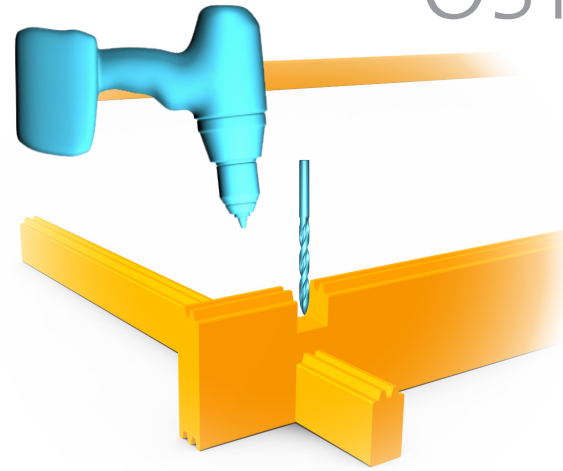
OSTO LEIPZIG 34



ATTACH THE FIRST ROW OF
WALL LOGS INTO THE BOTTOM
LOGS WITH SCREWS.


OSTO LEIPZIG 34

5×70  $\times 4$ 6×140  $\times 4$
 $\varnothing 4 \text{ mm}$  $\varnothing 5 \text{ mm}$ 

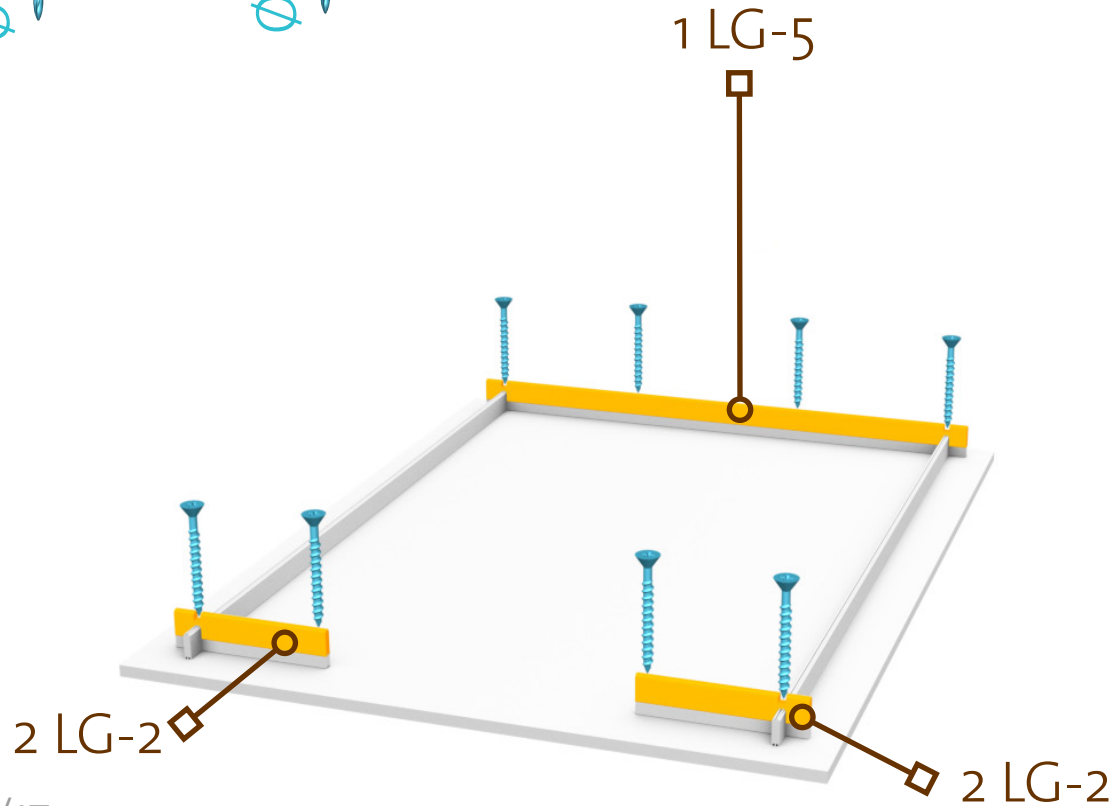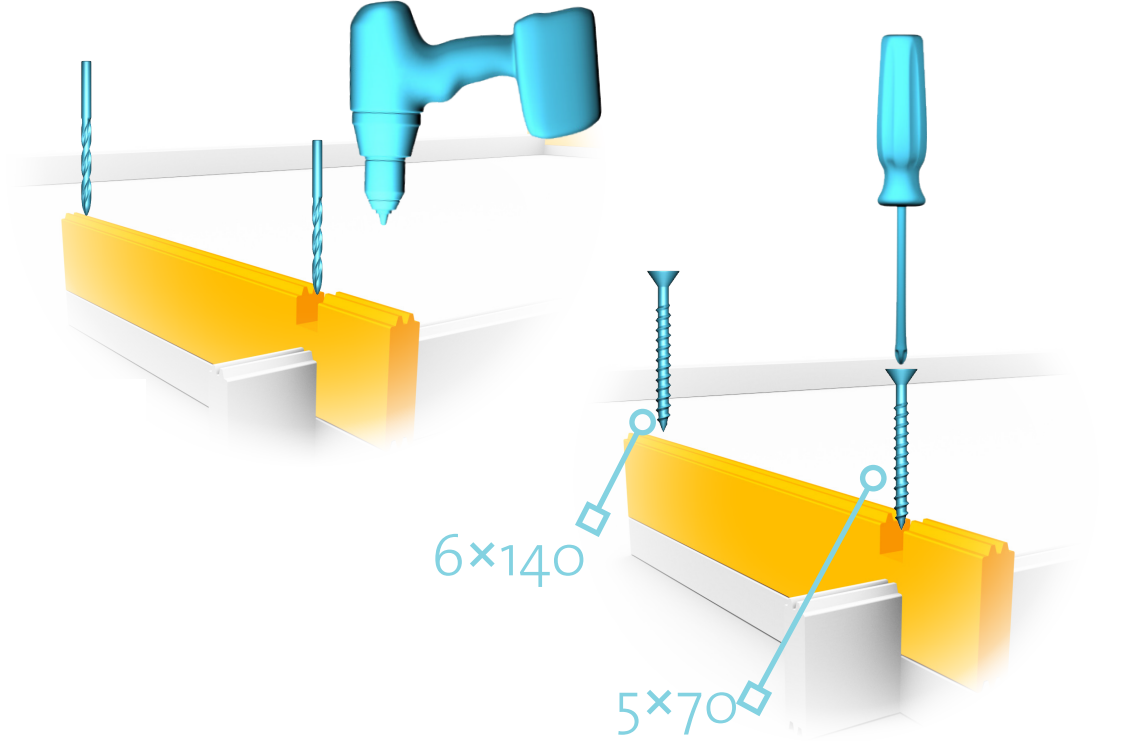



AFTER PLACING 3-4 ROWS OF WALL LOGS, TAP EACH WALL LOG IN PLACE USING A HAMMER AND THE HITBLOCK PROVIDED, TO TIGHTEN THE LOGS.

OSTO LEIPZIG 34

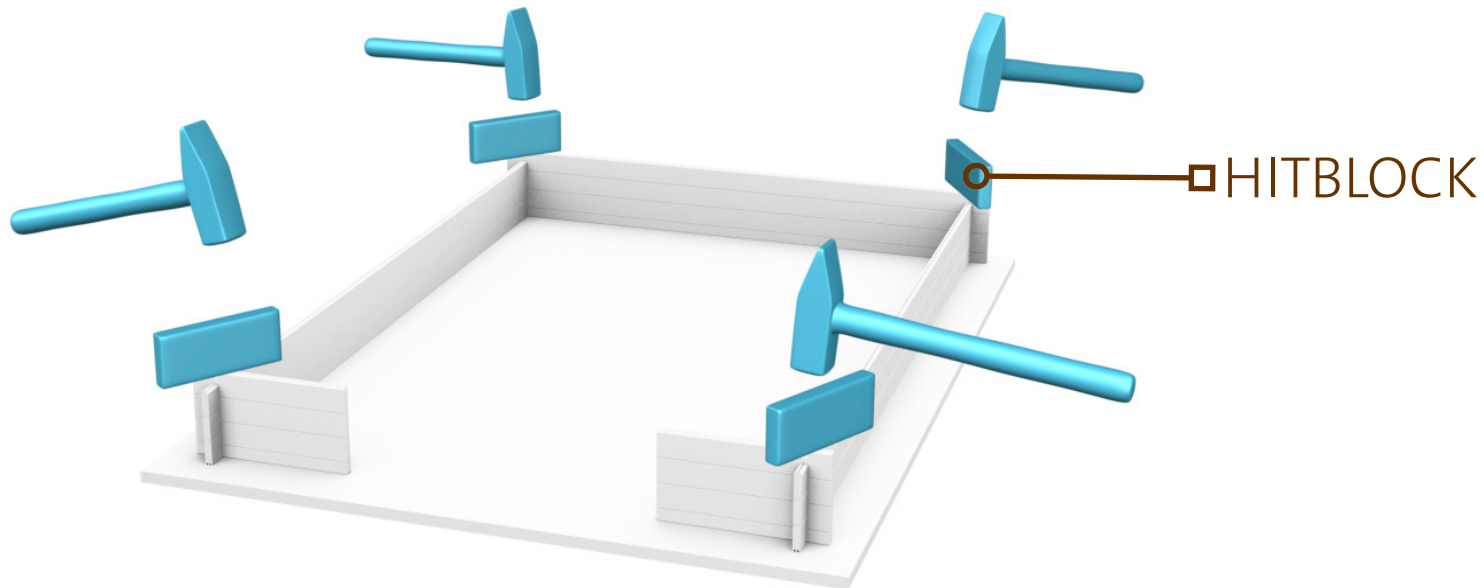


SLIDE THE DOOR IN,
ATTACH THE HANDLE.

OSTO LEIPZIG 34

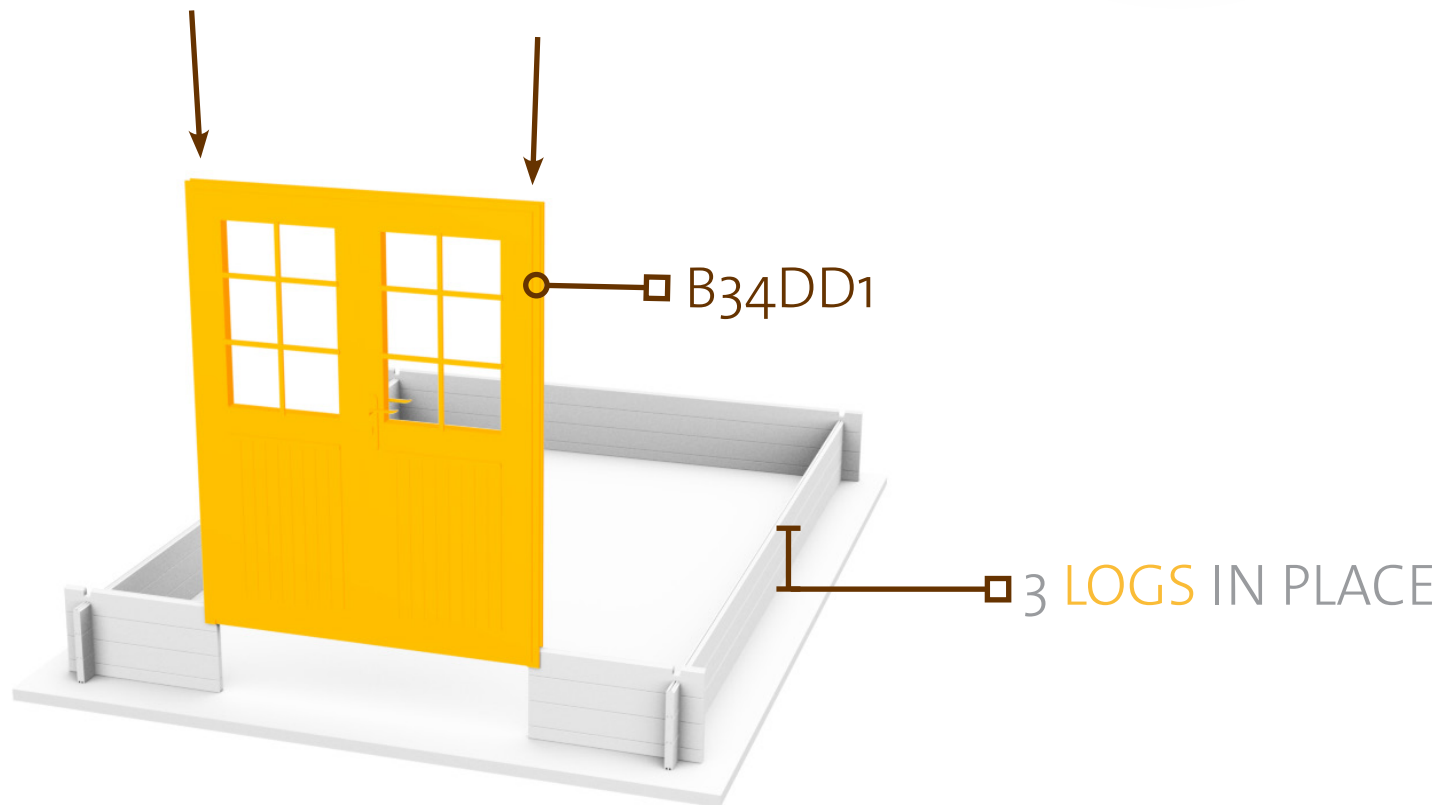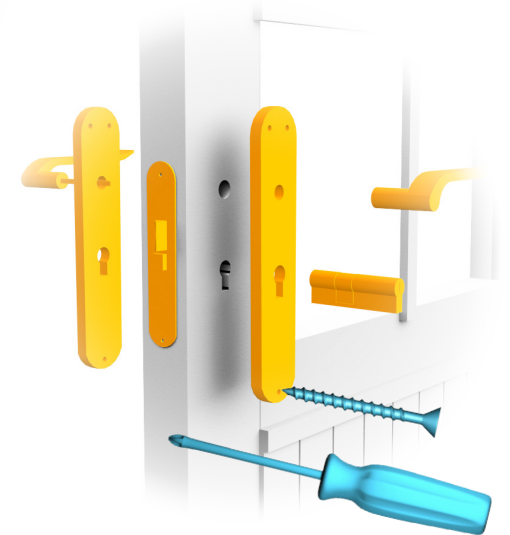

DON`T FORGET TO
TIGHTEN THE LOGS AFTER
EVERY 3-4 ROWS.



OSTO LEIPZIG 34

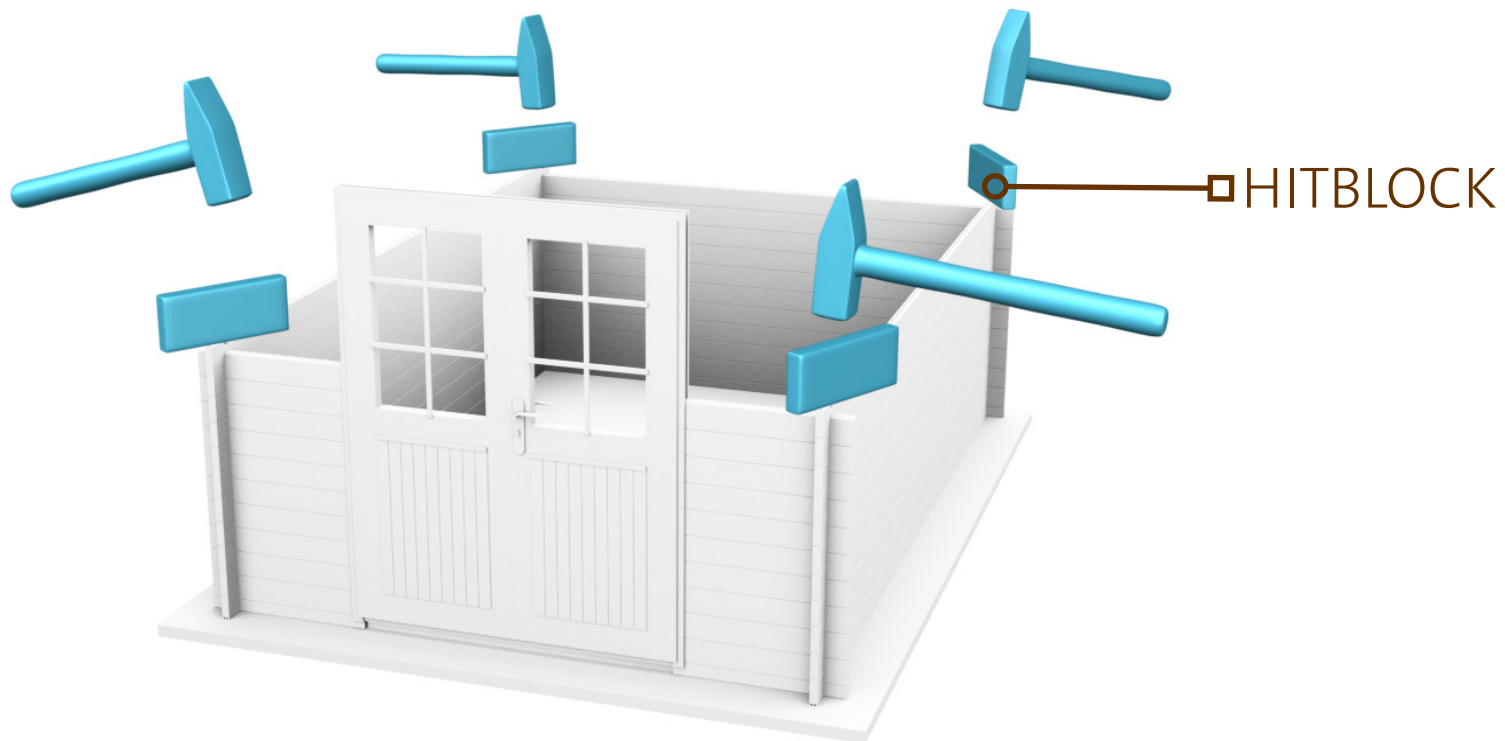

INSTALL THE GABLES WITH LONG SCREWS
TO THE WALL LOGS ON THE FRONT AND
REAR WALLS.

OSTO LEIPZIG 34


6x140
× 4
Ø 5 mm

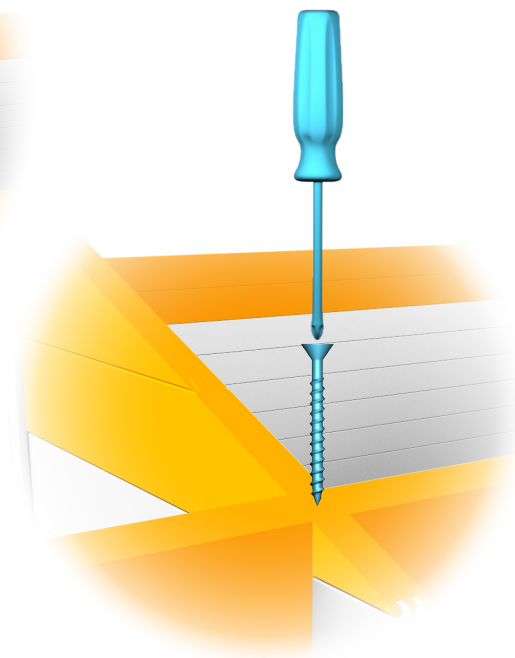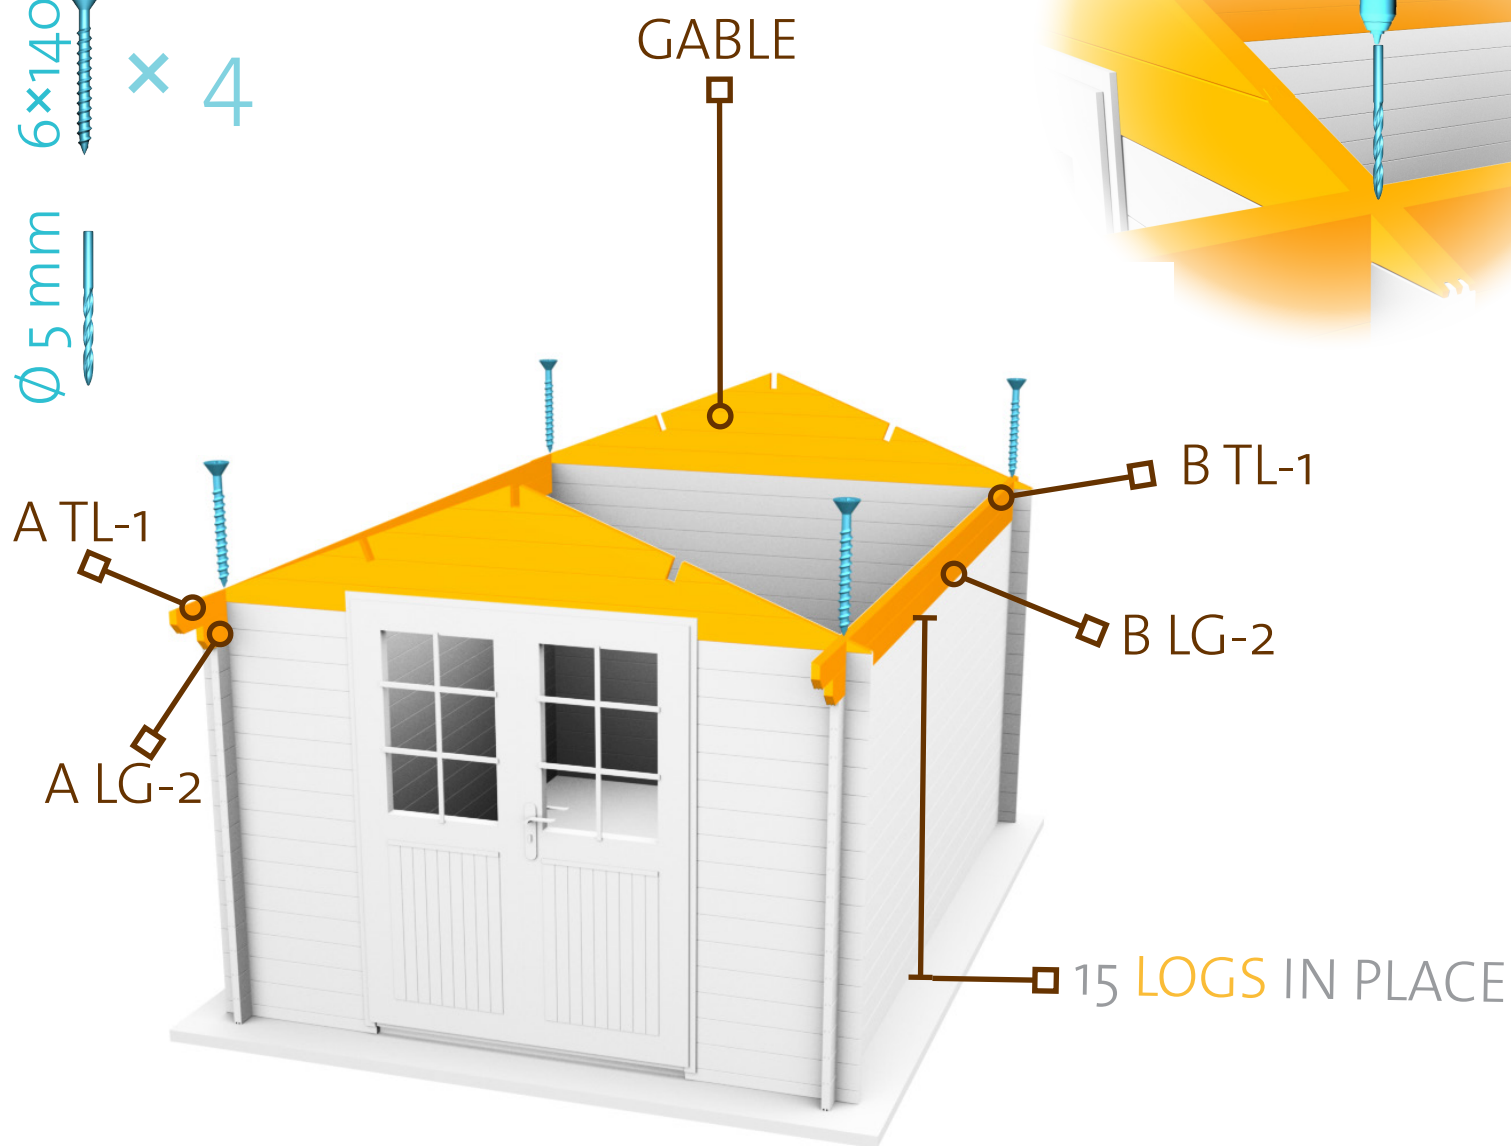



INSTALL THE **ROOF** PURLINS AND
ROOF ELEMENTS 1, **ATTACH** THEM
WITH SCREWS.

6x140
× 6

Ø 5 mm

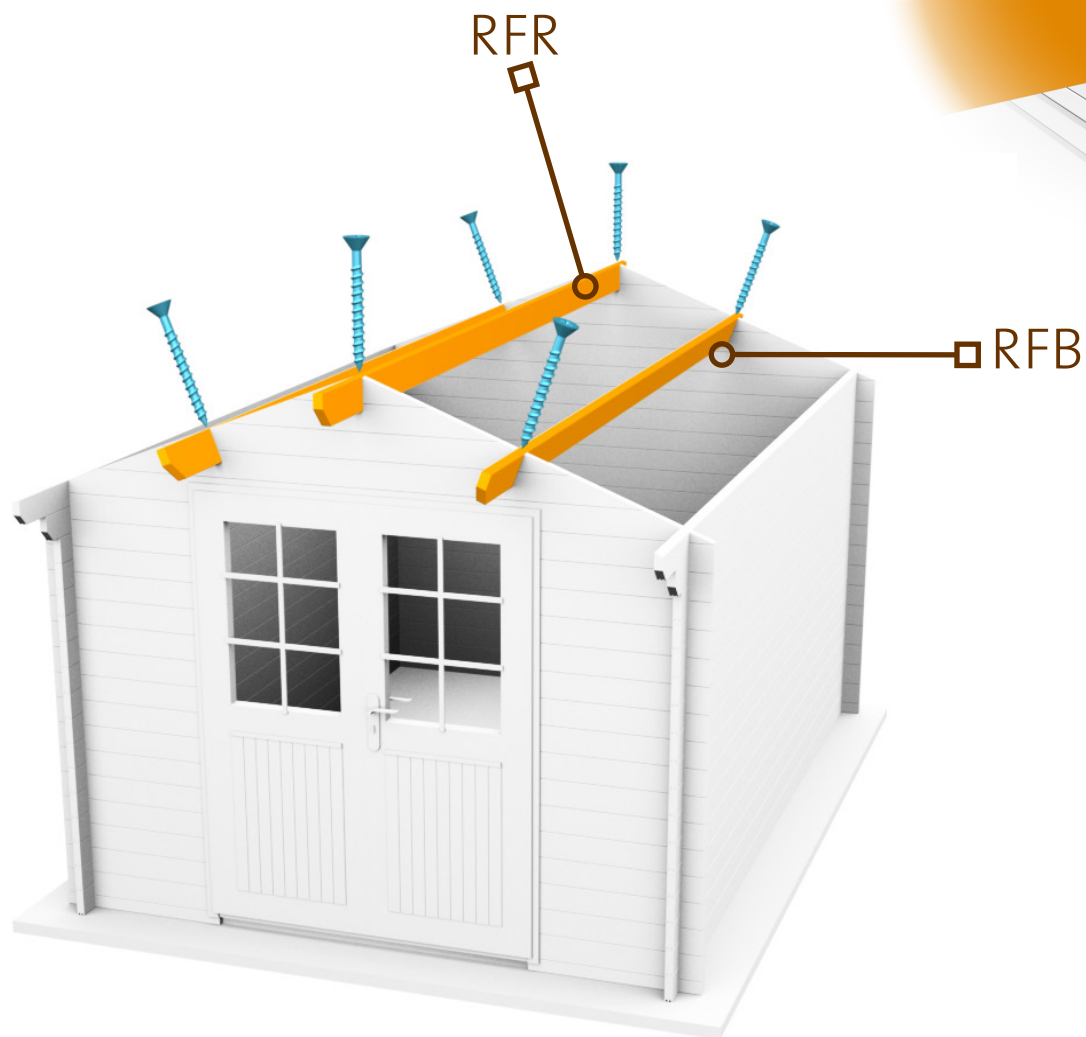


OSTO LEIPZIG 34

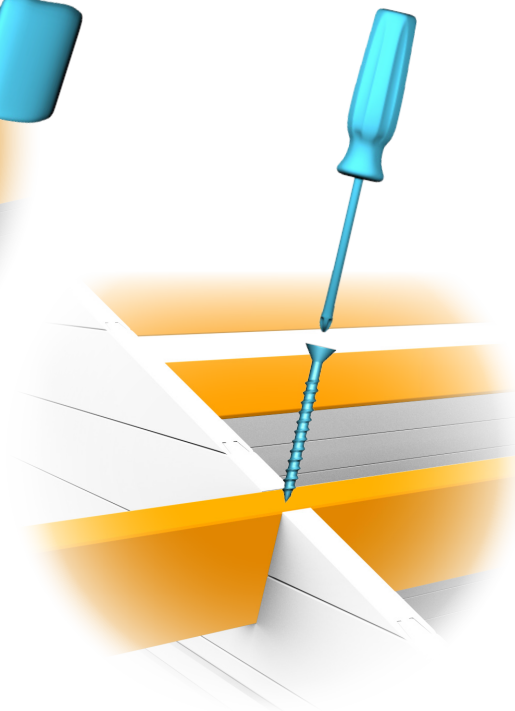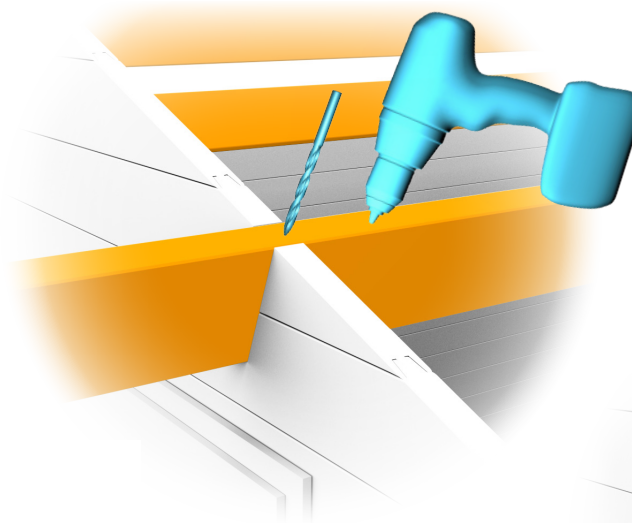

PLACE THE FIRST **ROOFBOARD** FLUSH WITH THE **END** OF THE PURLINS AND ATTACH WITH 6 SCREWS, 3 **INTO** EACH NEXT.

4x50
× 246

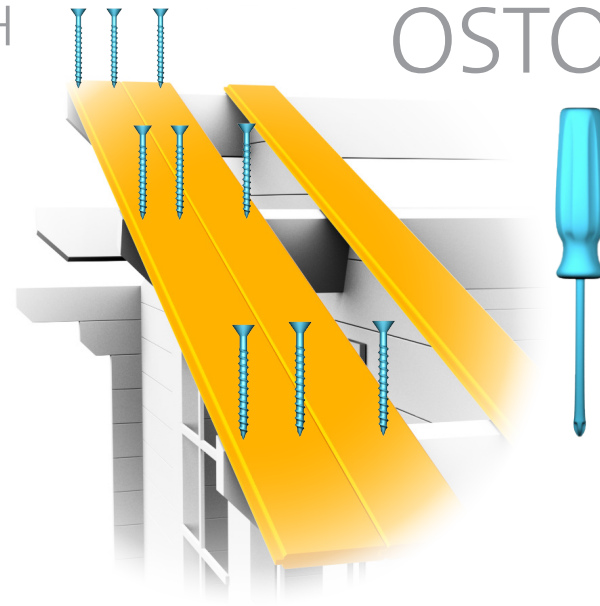


OSTO LEIPZIG 34



FOR THE FASCIA TRIMS
INSERT **SCREWS** AFTER
EVERY 0,5 METERS.

4x40
× 40

OSTO LEIPZIG 34

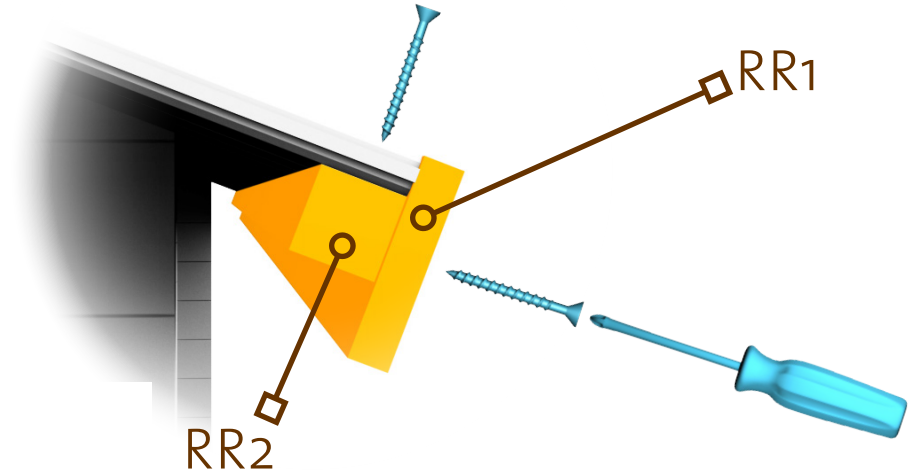

EAVES EDGES GO ON TOP
OF THE ROOFING*.

*(NOT INCLUDED)

4x40
× 32

Ø 3 mm




OSTO LEIPZIG 34

EE



RF

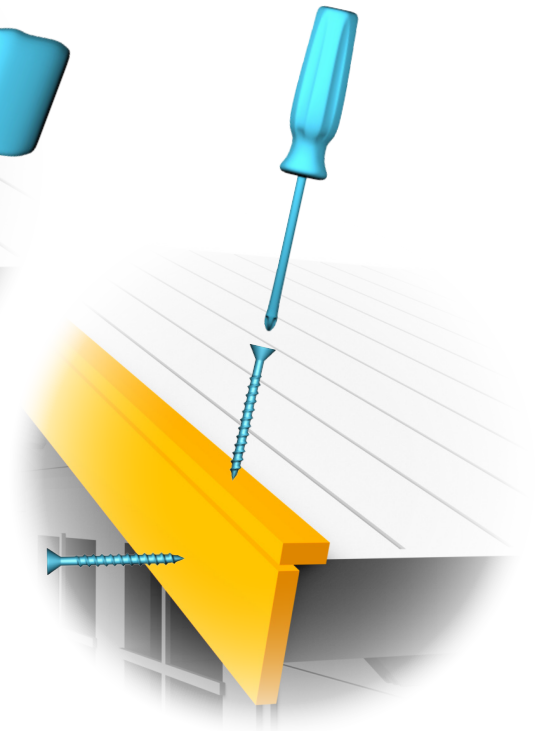


ATTACH ROMBS WITH SCREWS.





OSTO LEIPZIG 34

4x40
× 4
Ø 3 mm

ROMB

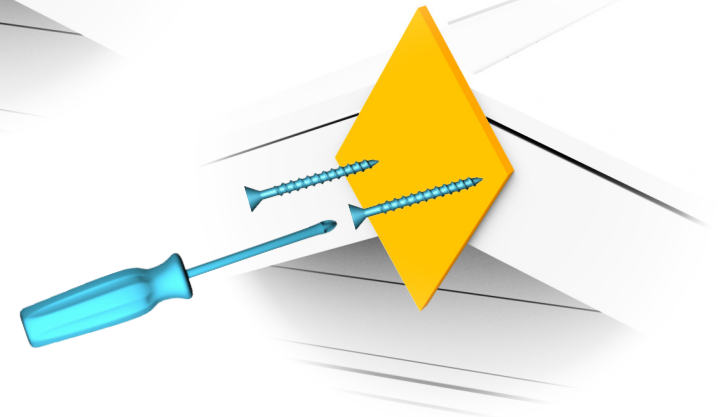

DRILL THROUGH THE WALL, HOLE MUST
BE AT THE BOTTOM OF THE OVAL,
ATTACH WITH BOLT.

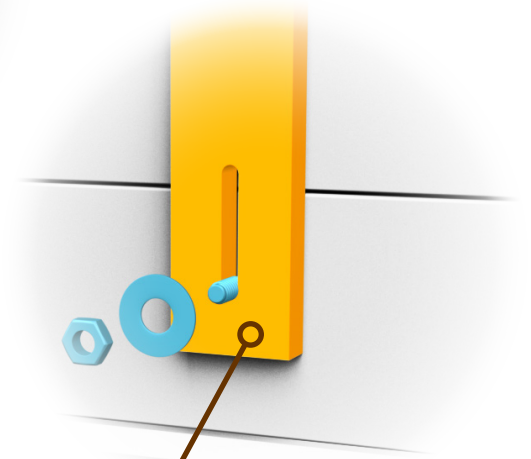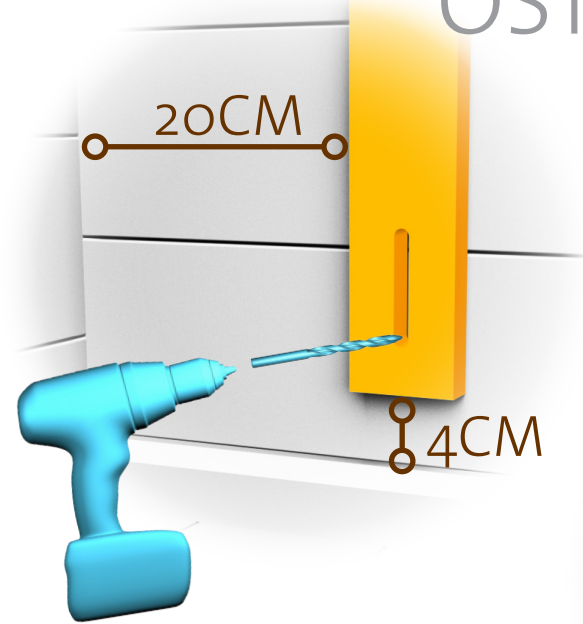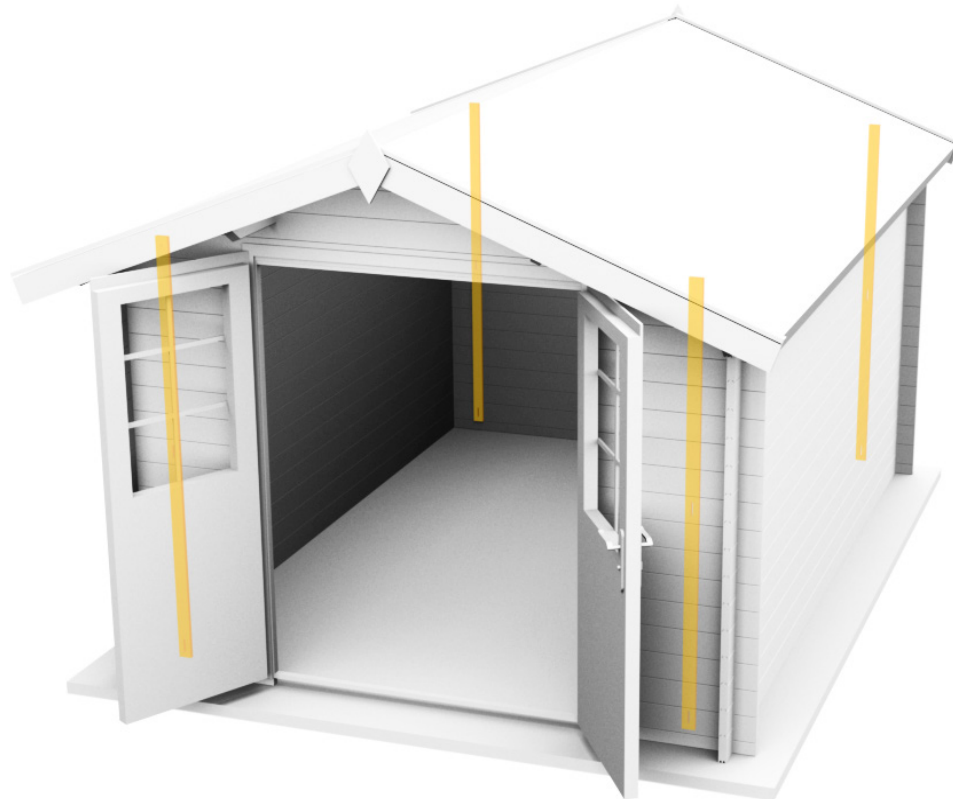
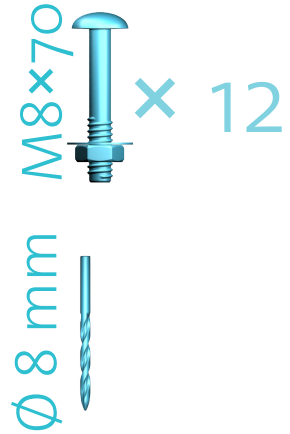


WINDBOARD

OSTO LEIPZIG 34


IF DOOR IS TILTED,
PUSH THE DOOR FRAME SO
THAT ALL CORNERS ARE 90° .

OSTO LEIPZIG 34

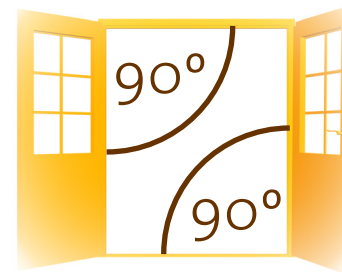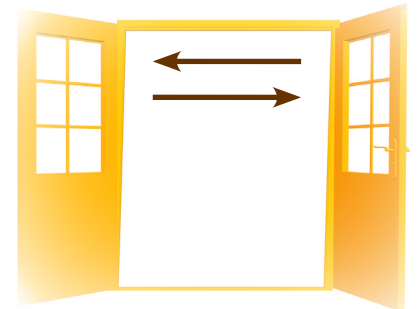

IF **DOORS** ARE IN DIFFERENT HEIGHTS
OR THERE IS A GAP **BETWEEN** THEM,
ADJUST 3 SCREWS ON DOOR HINGES.

OSTO LEIPZIG 34

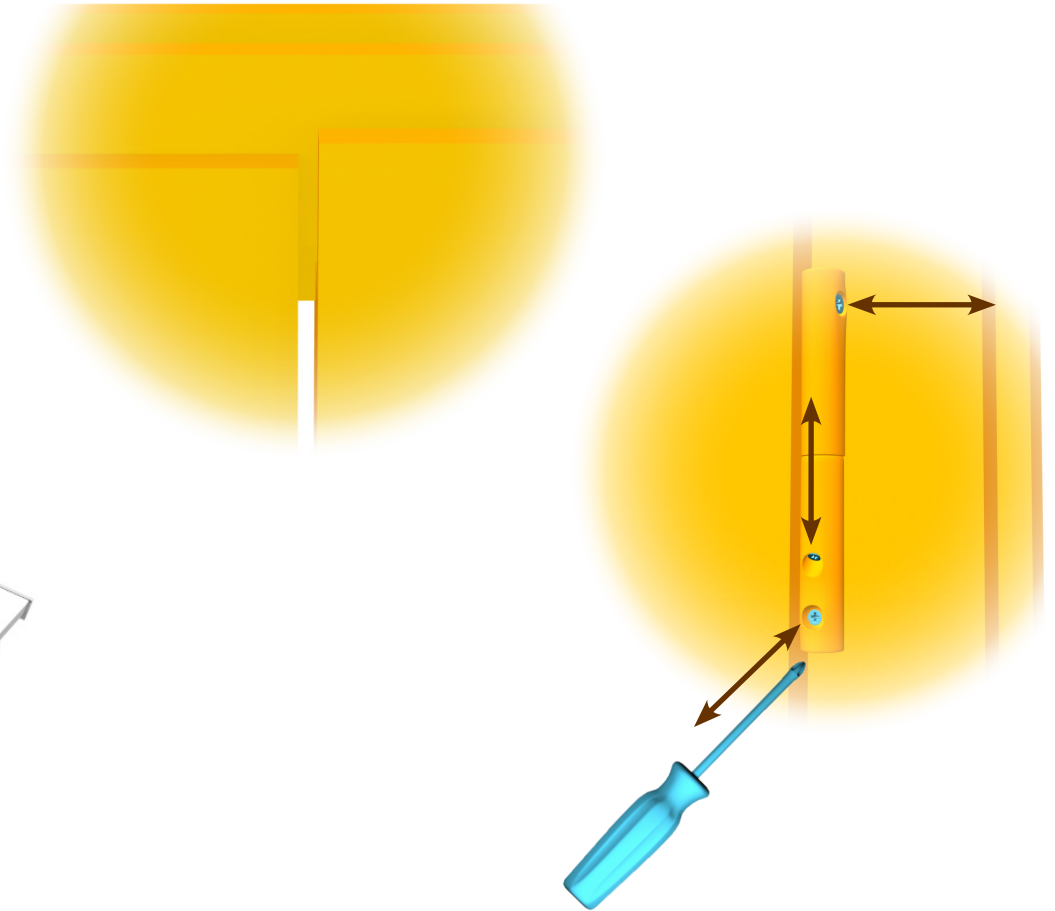

WHEN THE **HOUSE** IS ASSEMBLED, YOU SHOULD **COVER** THE TIMBER WITH **WOOD** PROTECTIVE SEAL, PAINT OR **STAIN** AS SOON AS POSSIBLE TO AVOID DETERIORATION TO THE **WOOD**.

OSTO LEIPZIG 34

