

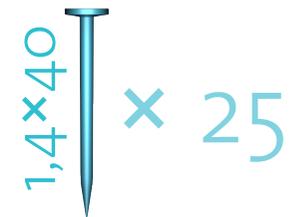
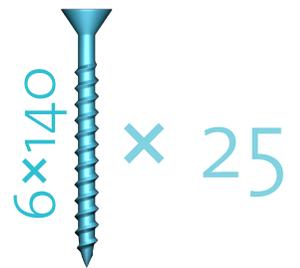
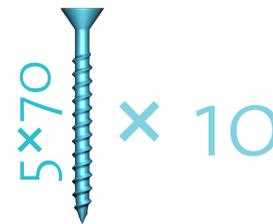
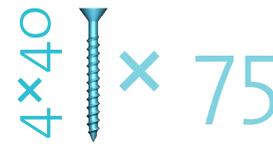
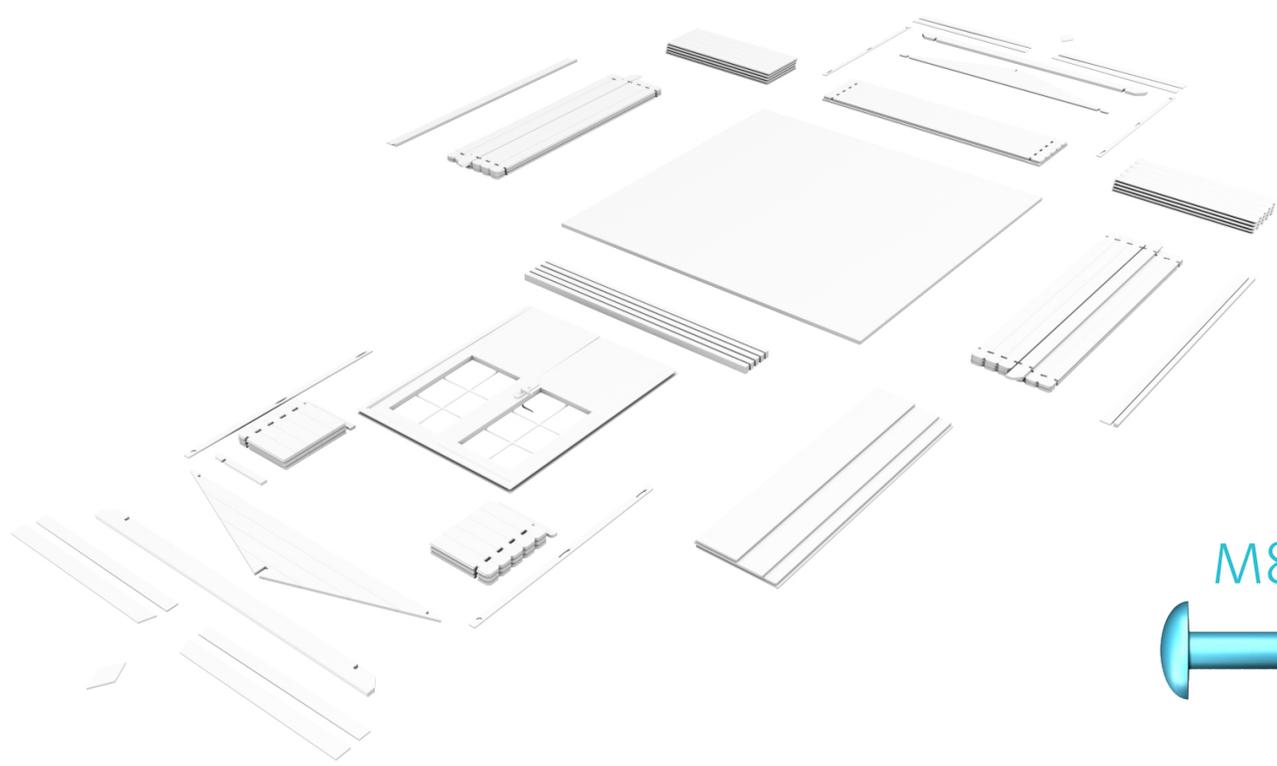
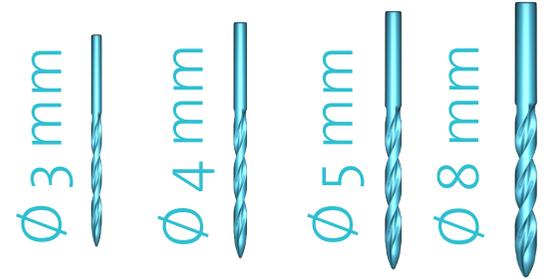
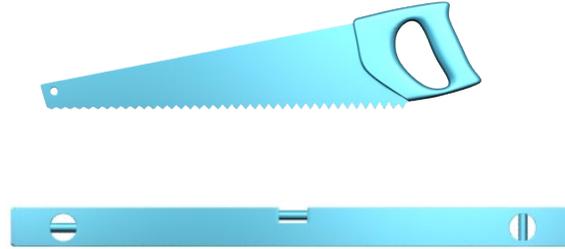
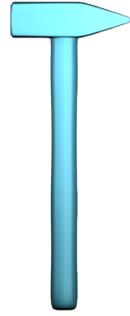
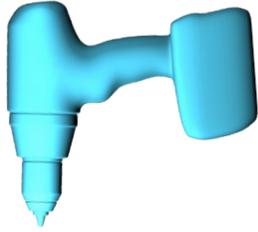
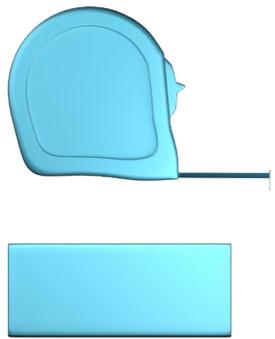


PREPARE THE GROUND, UNWRAP THE PACKAGE,
LAY OUT THE COMPONENTS, FIND THE TOOLS.



BENTE II 28

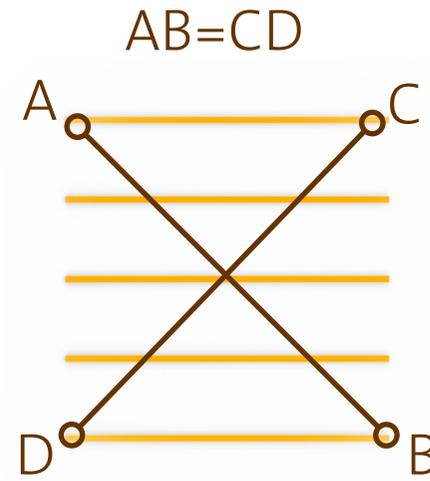

LAY OUT THE FOUNDATION BEAMS AND SQUARE IT BY MEASURING FROM CORNER TO CORNER.

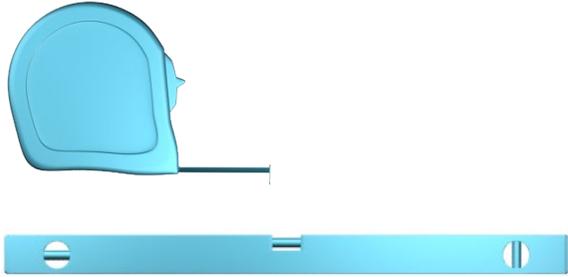




BENTE II 28

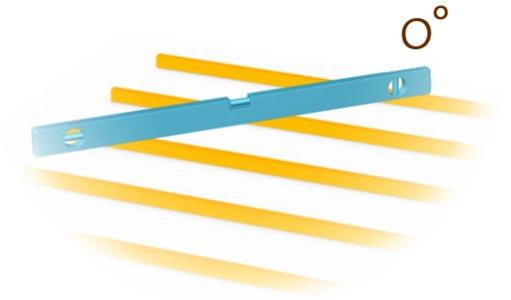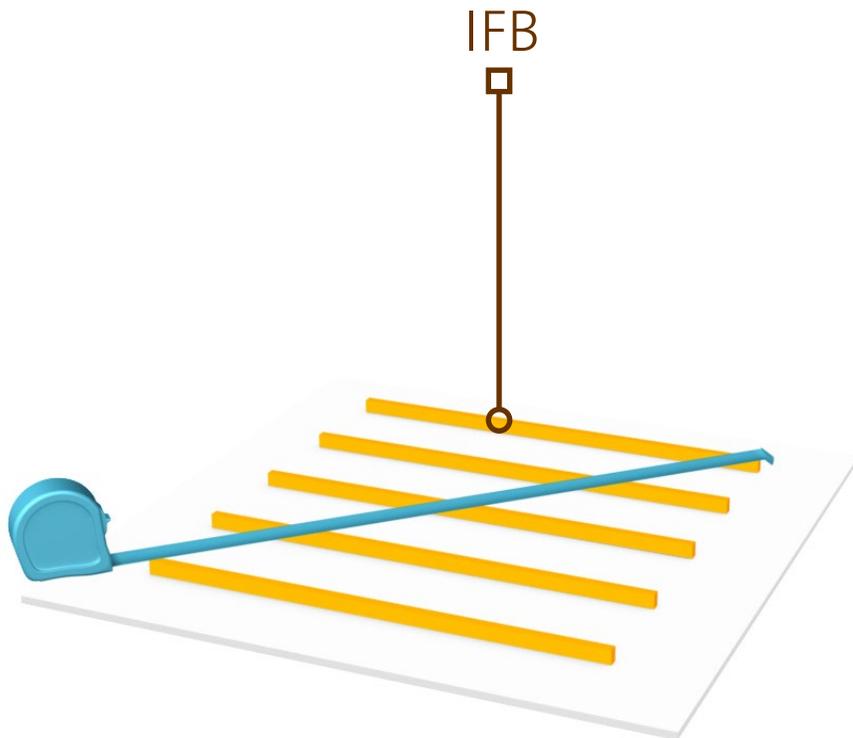

MAKE SURE THAT THE FOUNDATION IS INSTALLED ON A LEVEL SURFACE. CHECKING ALL DIRECTIONS, INCLUDING CORNER TO CORNER. 3%





LAY OUT THE **BOTTOM** LOGS,
ATTACH TO THE FOUNDATION.

BENTE II 28

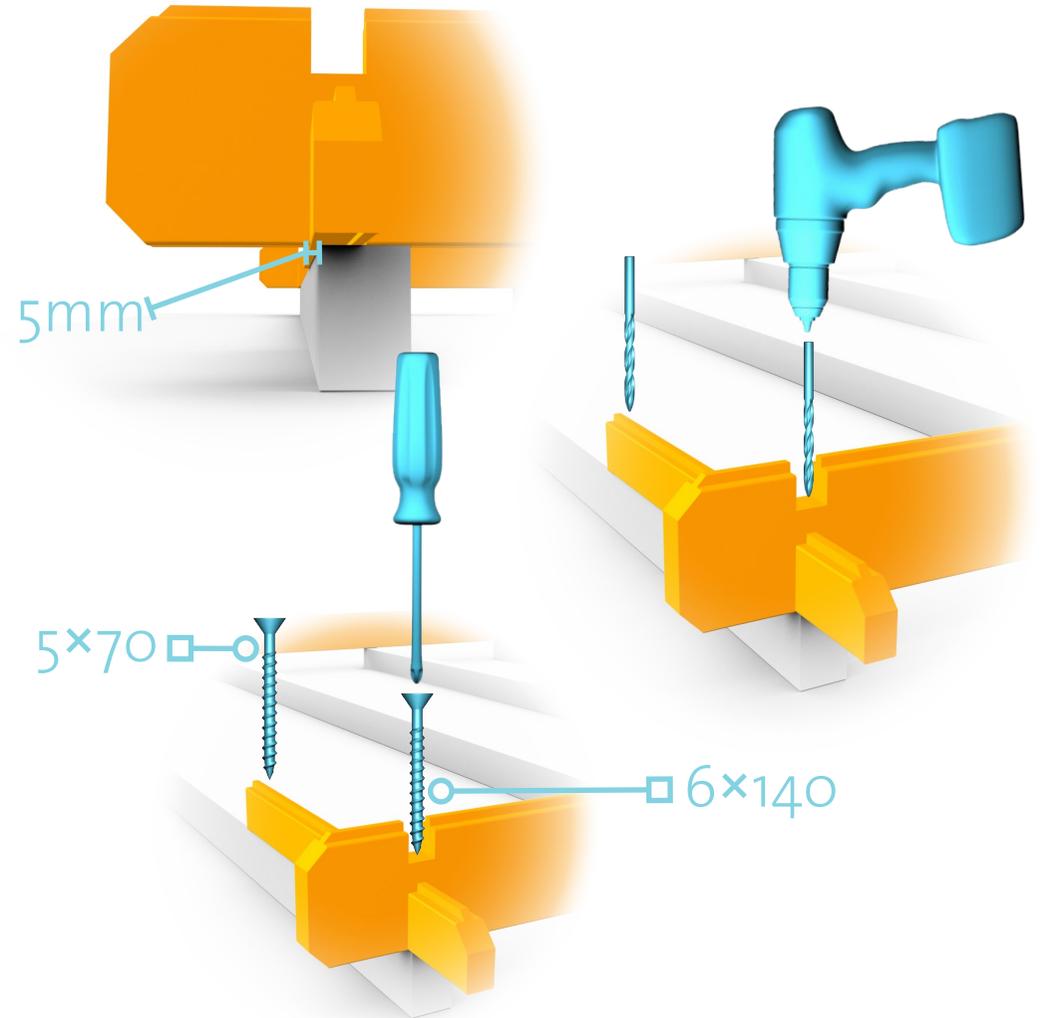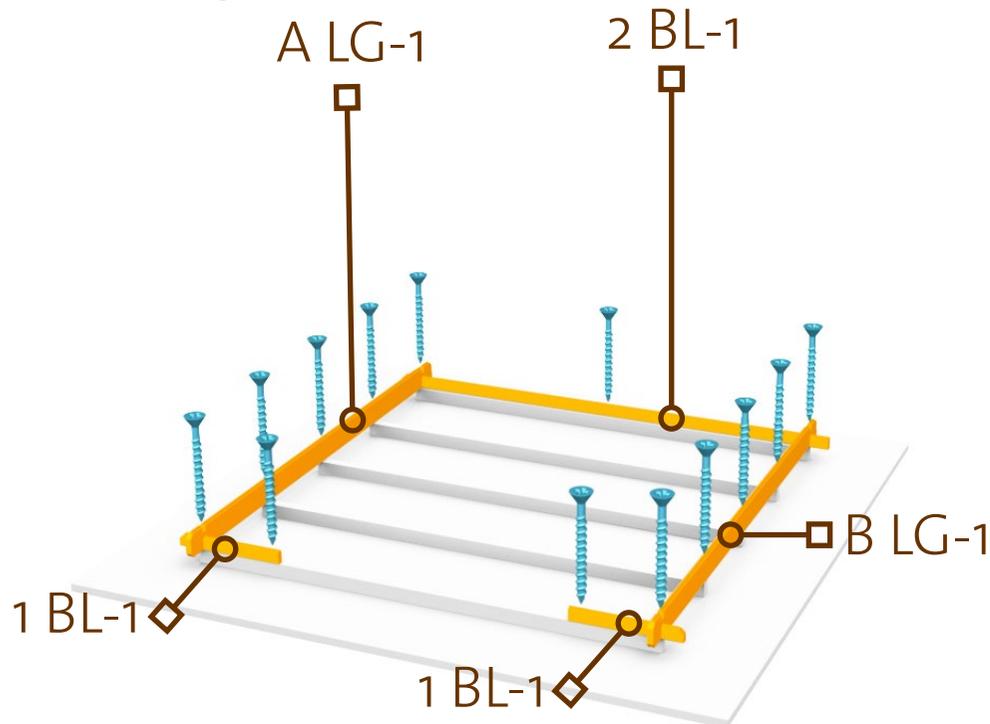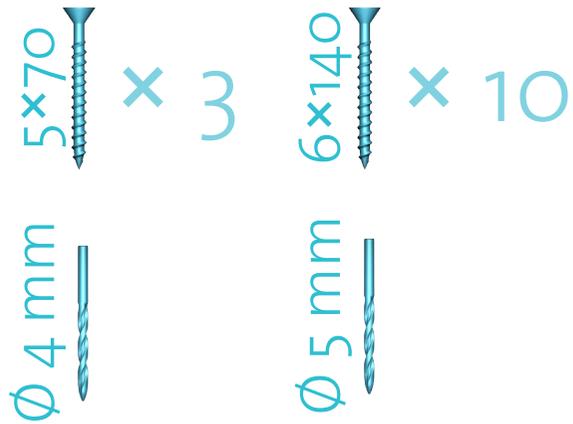


THE WALL **LOGS** WILL HANG OVER
THE FOUNDATION **BEAMS** BY
APPROXIMATELY 5MM. THIS OVERHANG
IS DESIGNED AS A RAIN DRIP. **5%**

ATTACH THE FIRST ROW OF
WALL LOGS INTO THE BOTTOM
LOGS WITH **SCREWS**.

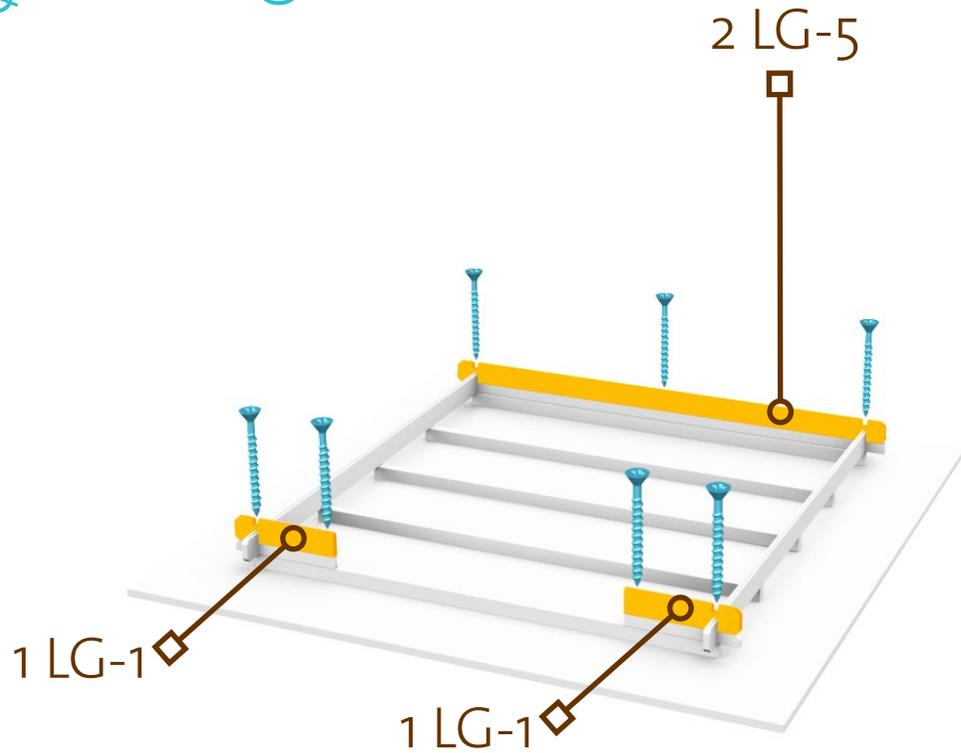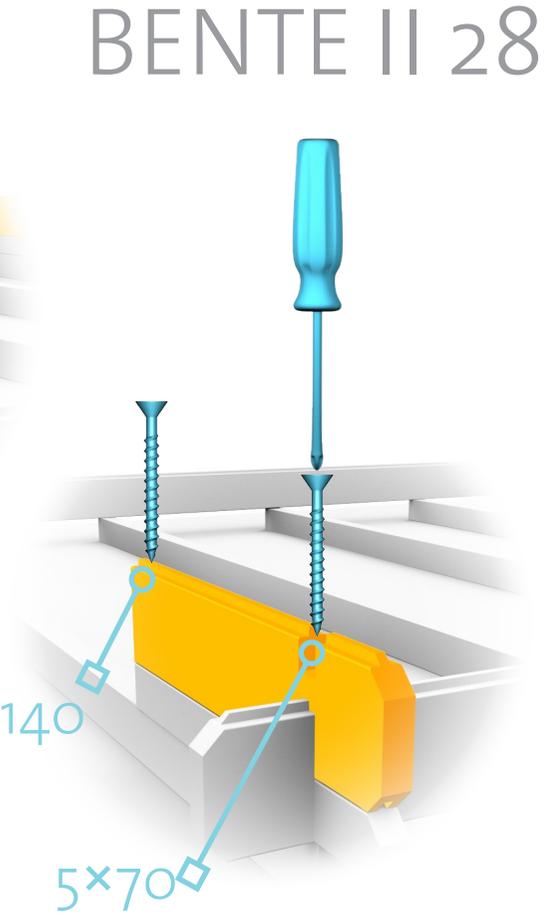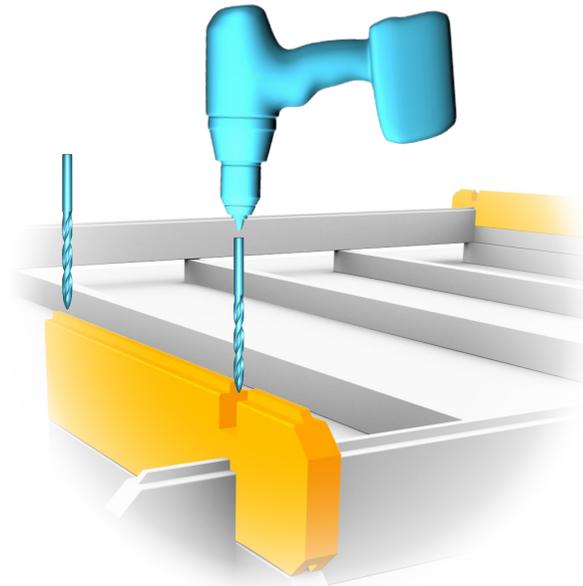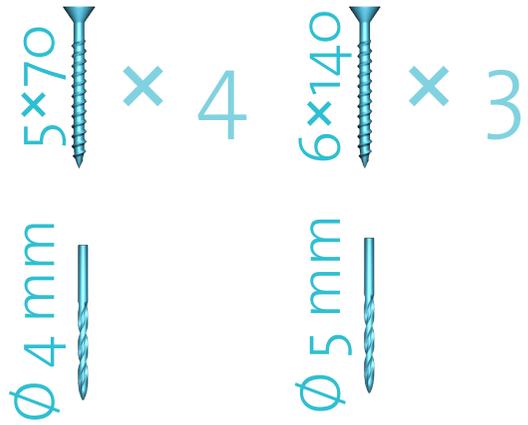



AFTER PLACING 3-4 ROWS OF WALL LOGS, TAP EACH WALL LOG IN PLACE USING A HAMMER AND THE HITBLOCK PROVIDED, TO TIGHTEN THE LOGS.

BENTE II 28

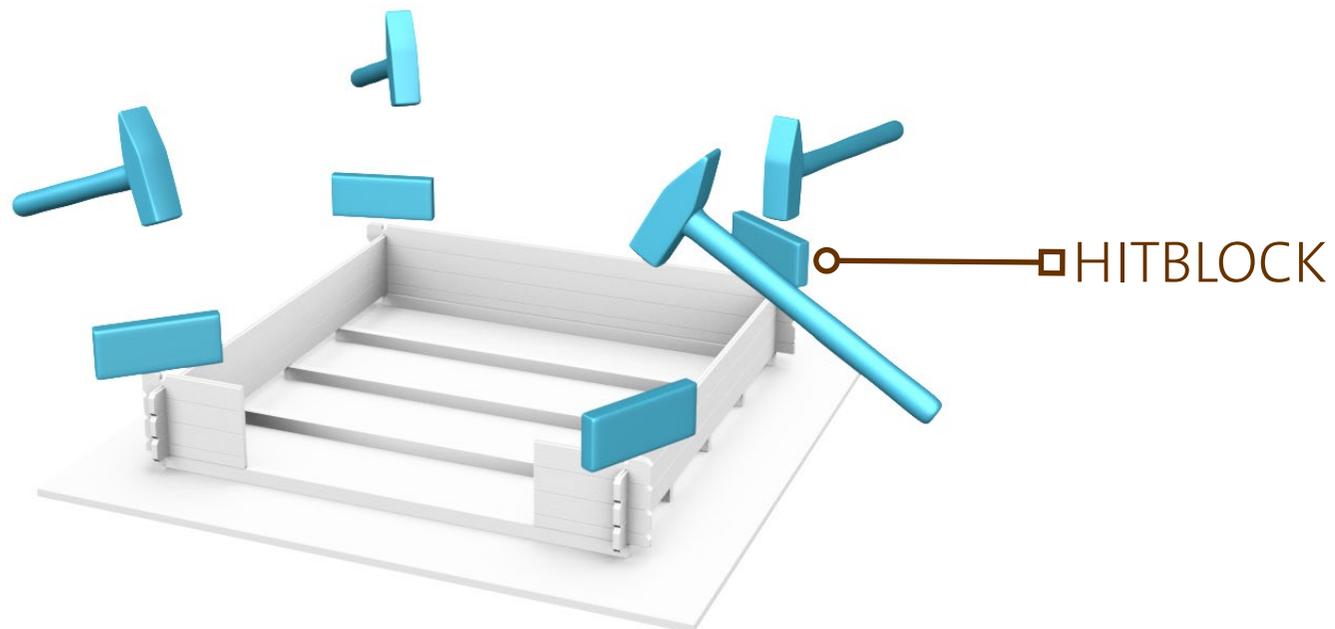


SLIDE THE DOOR IN,
ATTACH THE HANDLE.

BENTE II 28

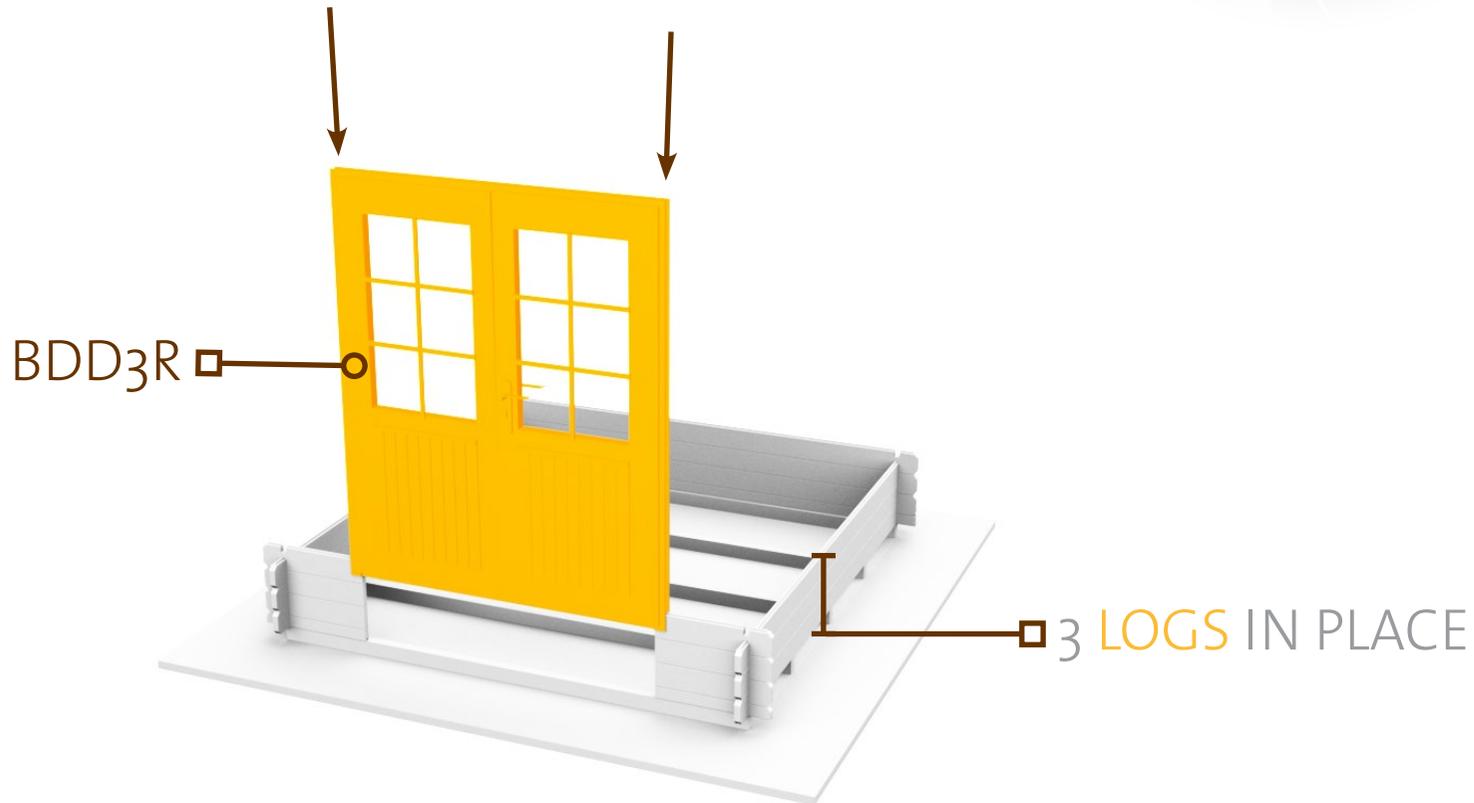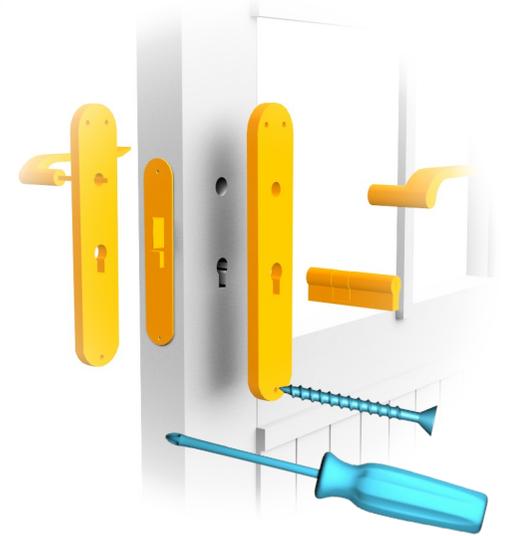

DON`T FORGET TO
TIGHTEN THE LOGS AFTER
EVERY 3-4 ROWS.




BENTE II 28

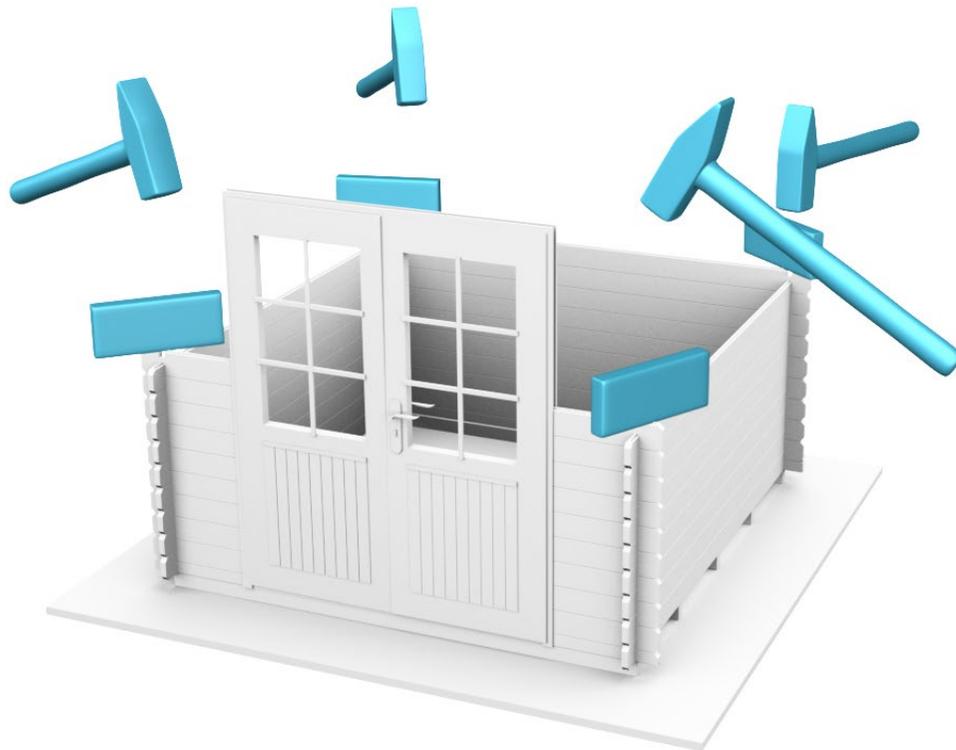

INSTALL THE GABLES WITH LONG SCREWS TO THE WALL LOGS ON THE FRONT AND REAR WALLS.


BENTE II 28

6x140 × 4
Ø 5 mm

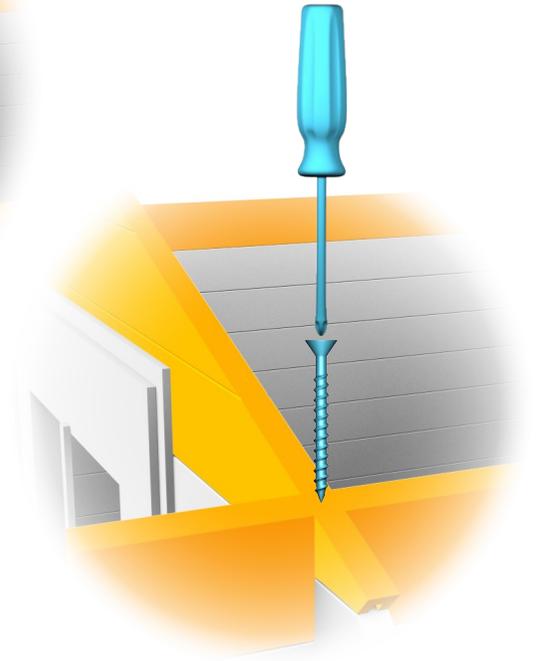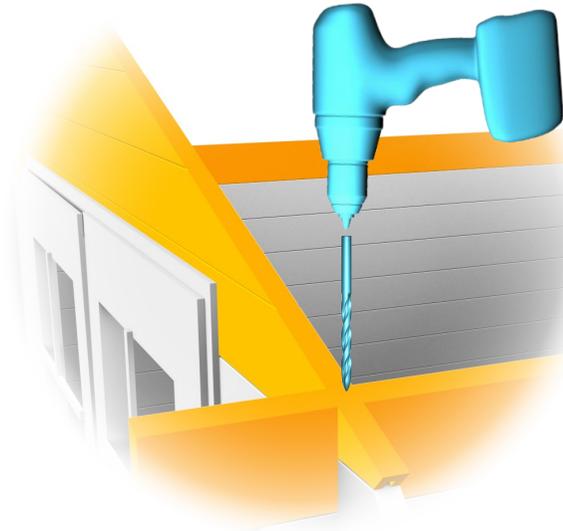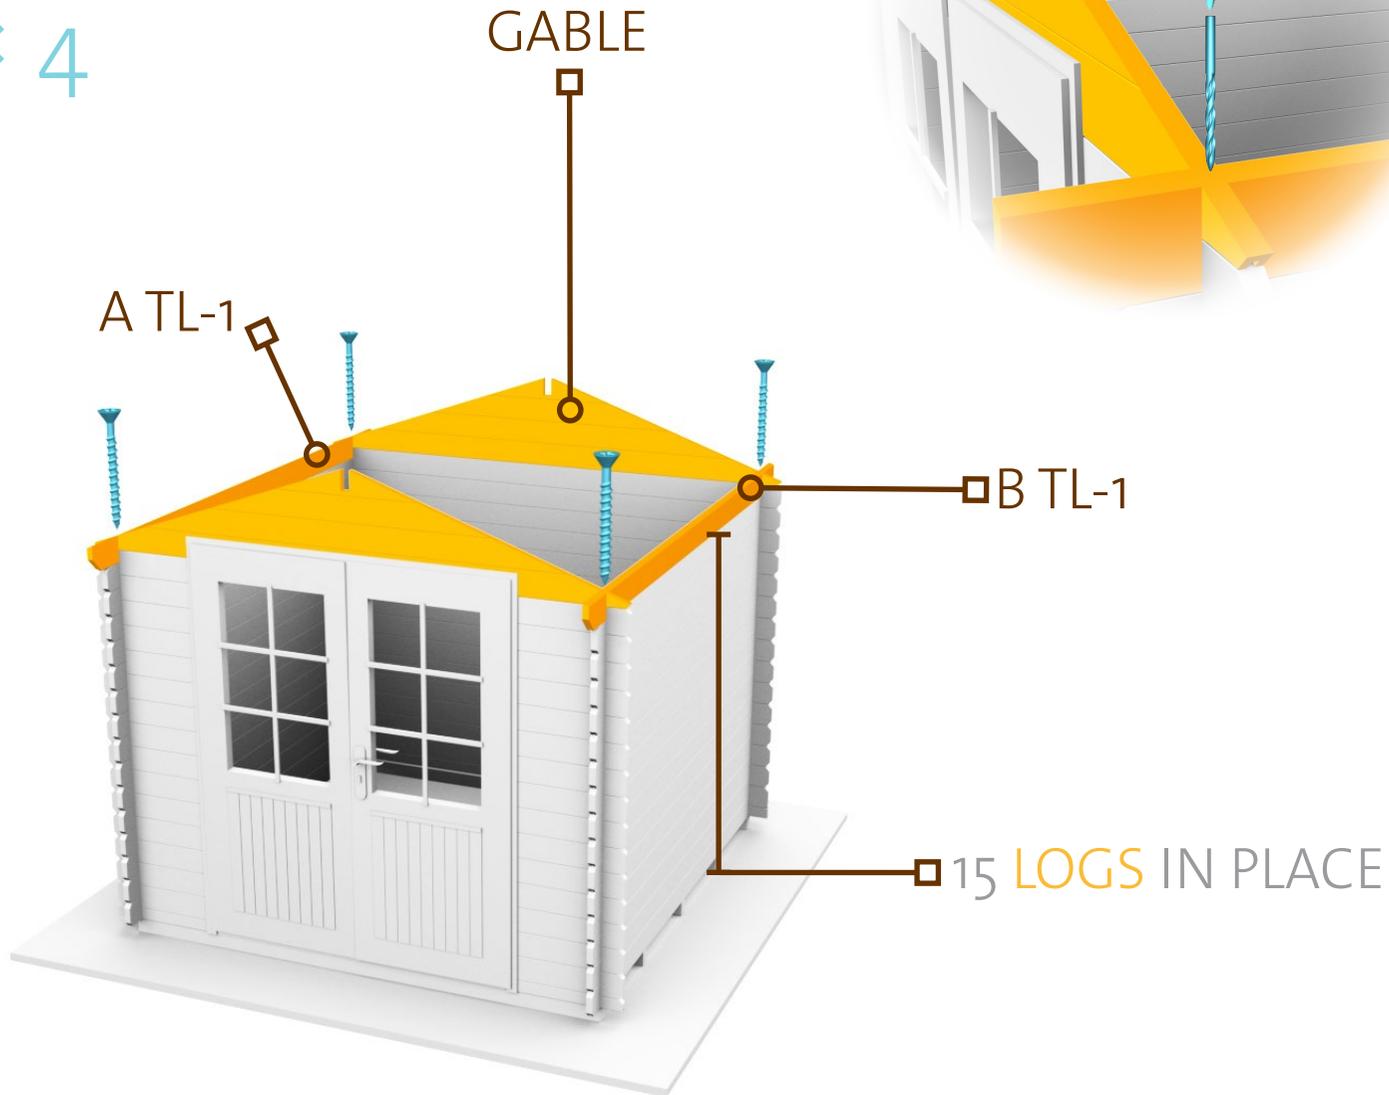


INSTALL THE **ROOF** PURLINS AND **ATTACH** THEM WITH SCREWS.

6x140 × 2
Ø 5 mm

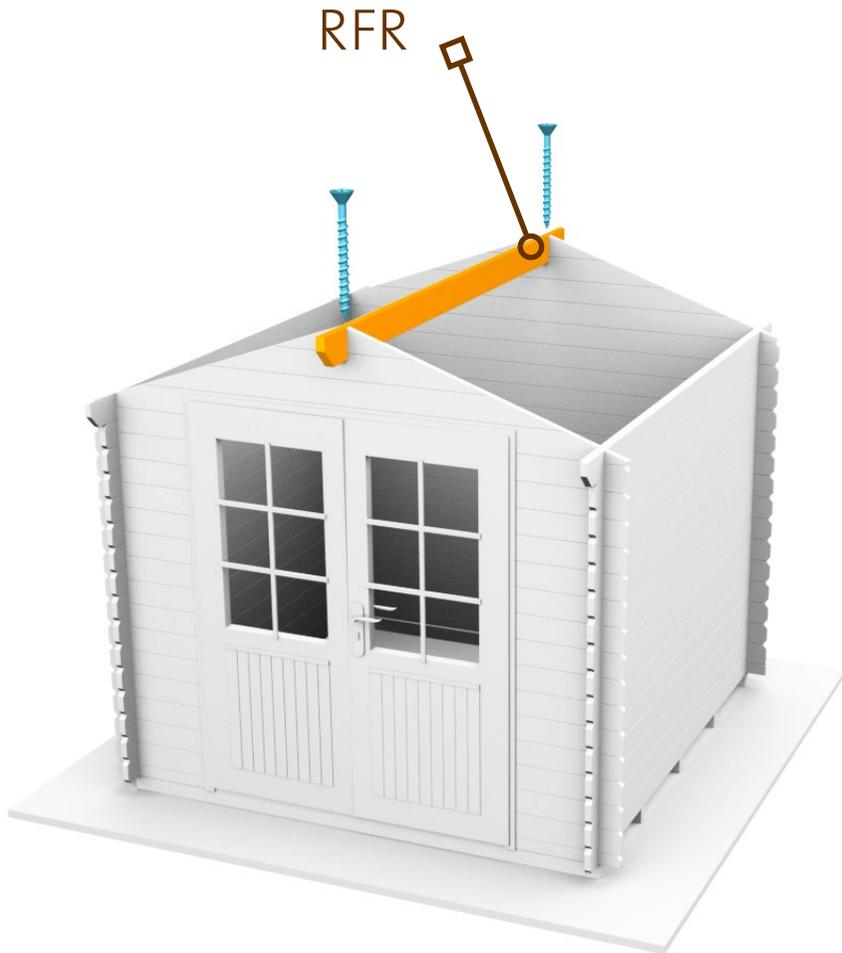



BENTE II 28

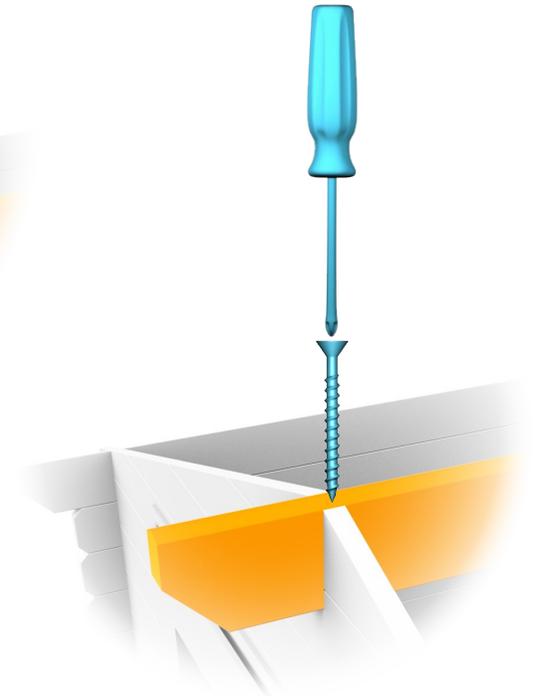

PLACE THE FIRST **ROOFBOARD** FLUSH WITH THE END OF THE **PURLINS** AND ATTACH WITH 6 SCREWS, 3 INTO **EACH** NEXT, SAW THE LAST **BOARD** TO MAKE IT FIT.

BENTE II 28



4x50  x 108

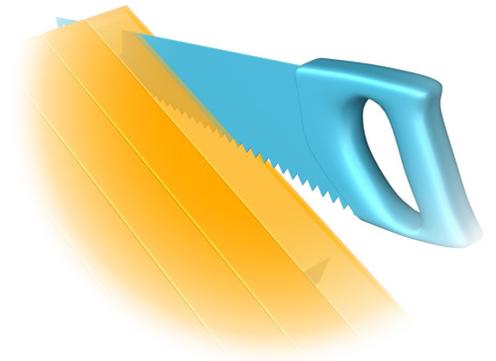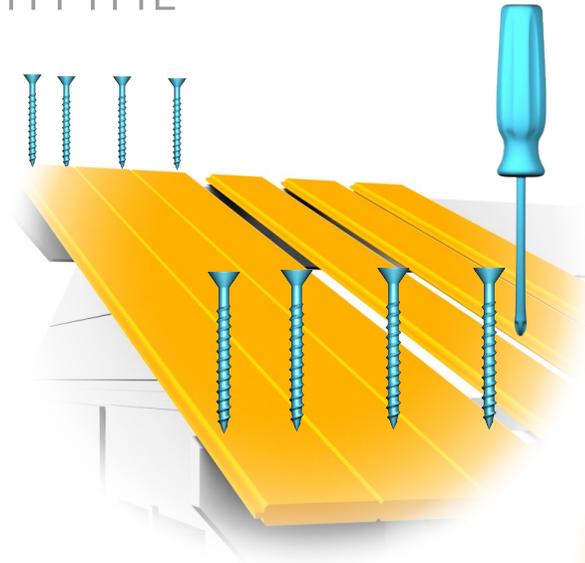

INSERT FOR THE FASCIA TRIMS
SCREWS AFTER EVERY 0,5 METERS.

BENTE II 28

4x40
× 24

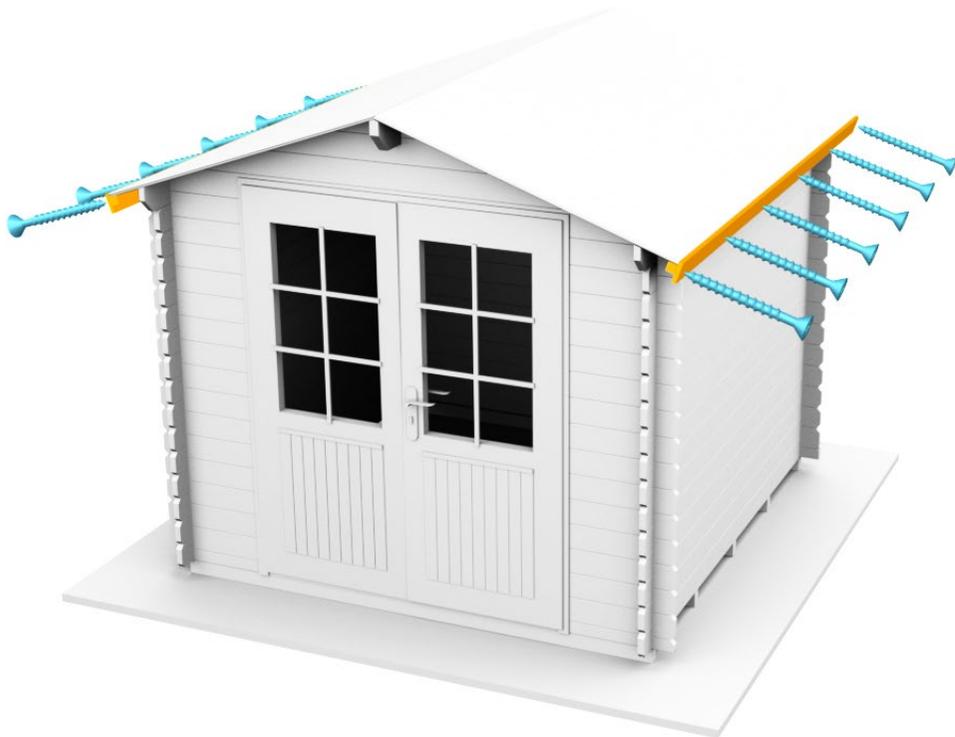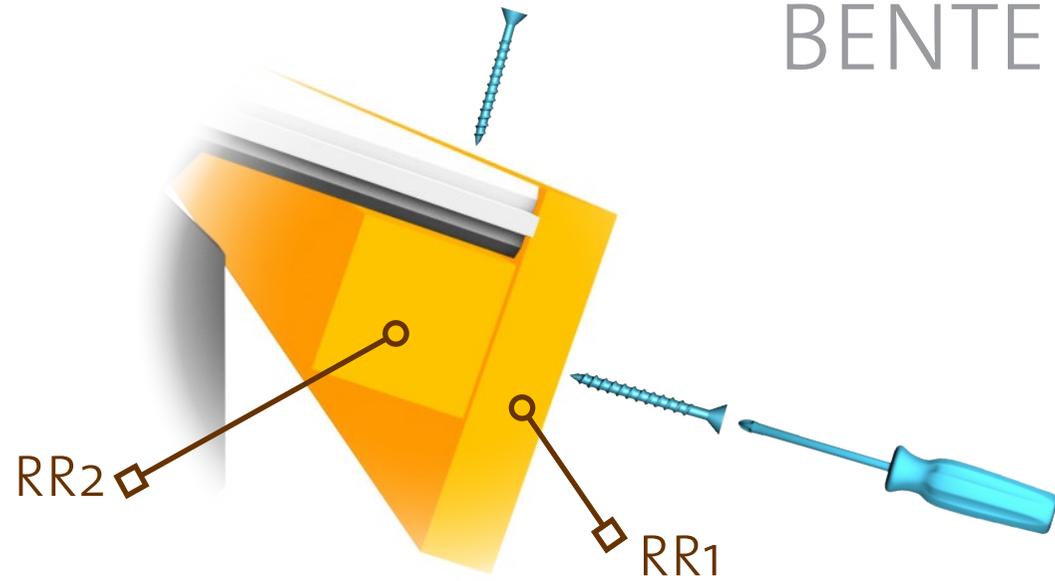



EAVES EDGES GO ON TOP OF THE ROOFING*.

*(NOT INCLUDED)

BENTE II 28

4x40 × 24



Ø 3 mm

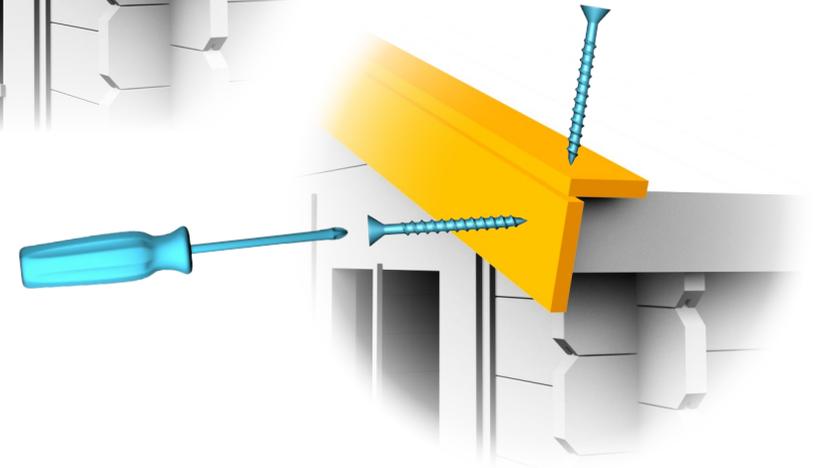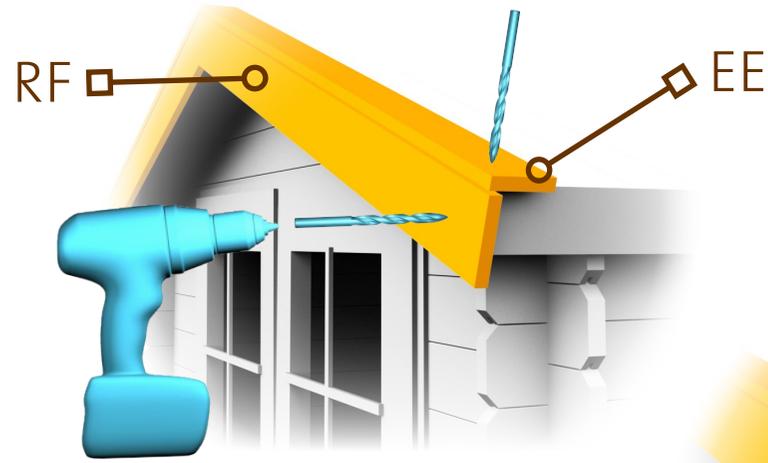

ATTACH ROMBS WITH SCREWS.


BENTE II 28

4x40
× 4
Ø 3 mm

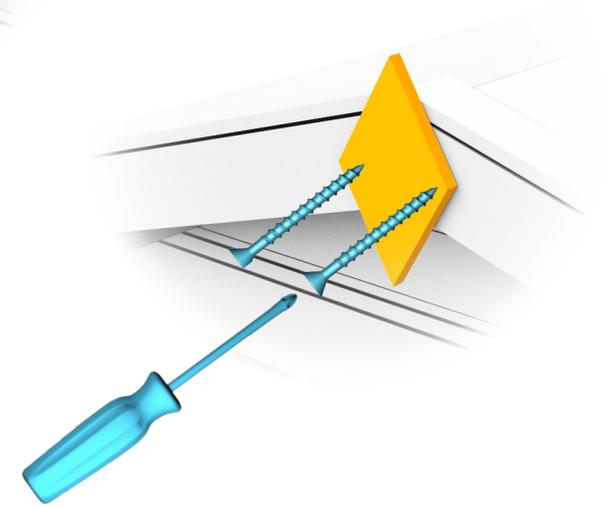
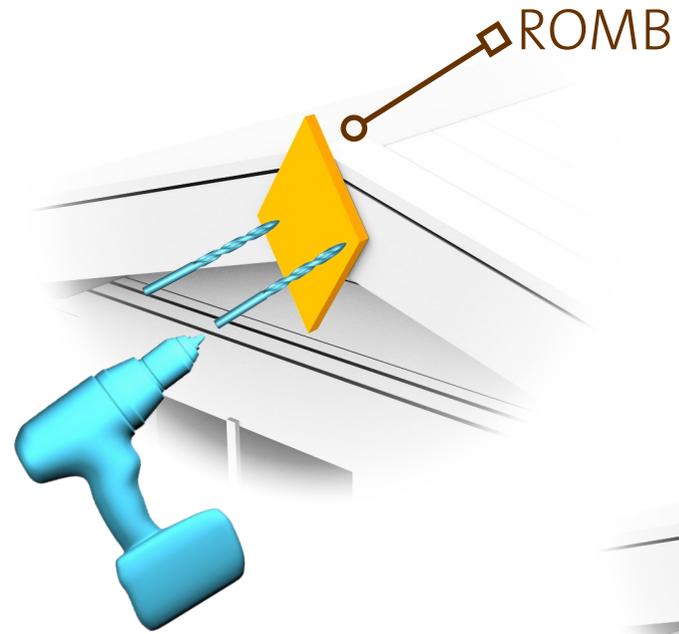


10 SCREWS INTO THE FIRST FLOORBOARD,
5 INTO EACH NEXT, SAW THE
LAST BOARD TO MAKE IT FIT.

4x50
× 115



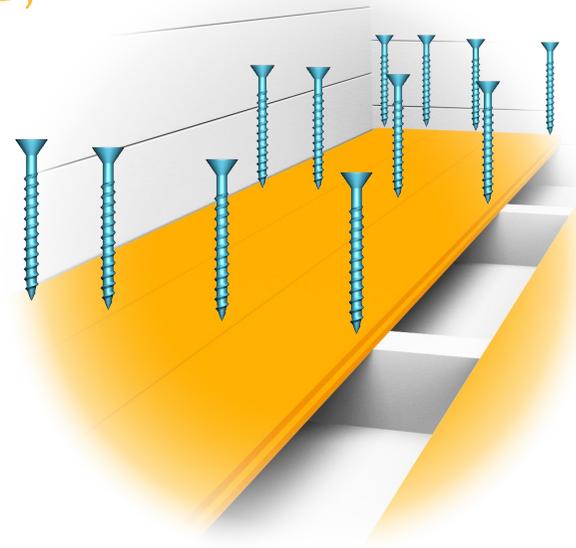


BENTE II 28

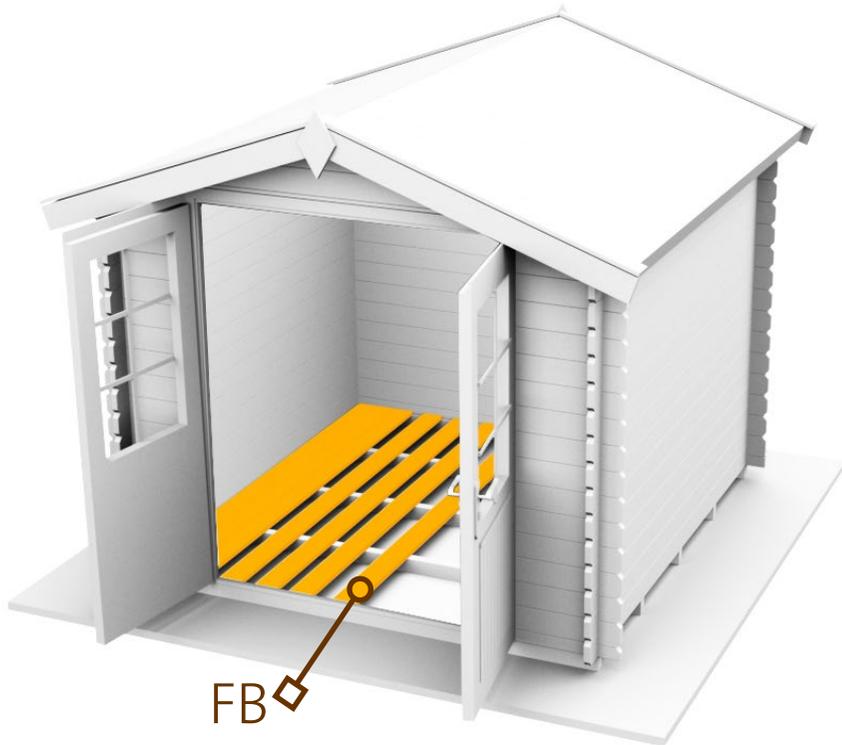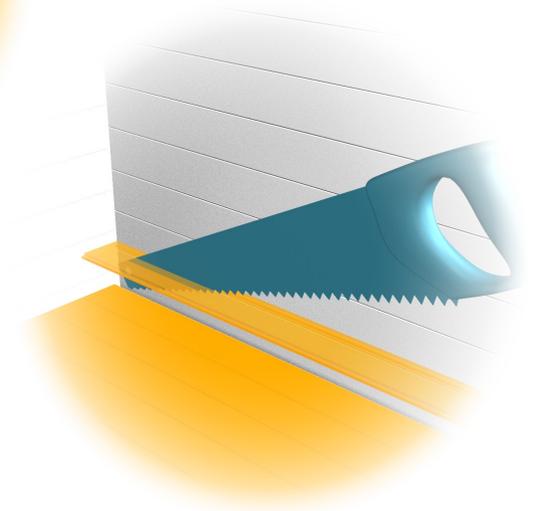



SAW THE **BASEBOARDS**
AND ATTACH WITH NAILS
AT **EVERY 0,5** METERS.

1,4×40
× 25

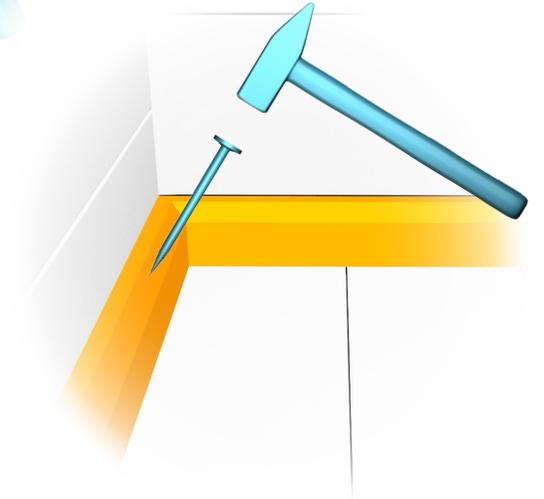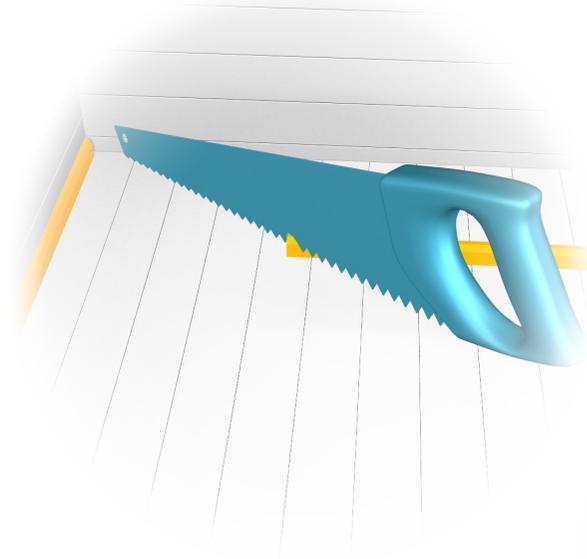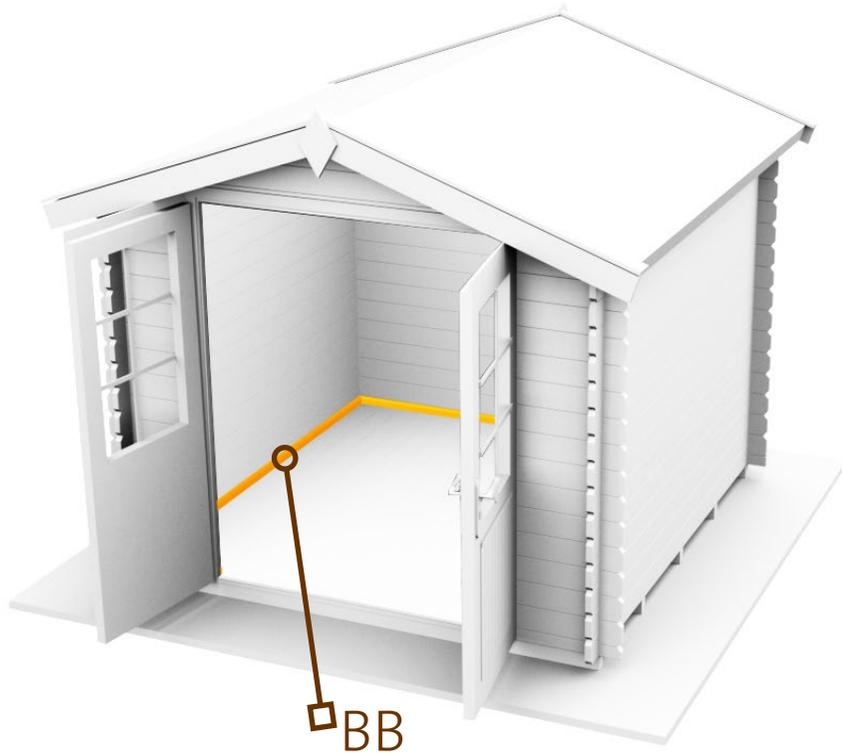


BENTE II 28

DRILL THROUGH THE WALL, HOLE MUST BE AT THE BOTTOM OF THE OVAL, ATTACH WITH BOLT.

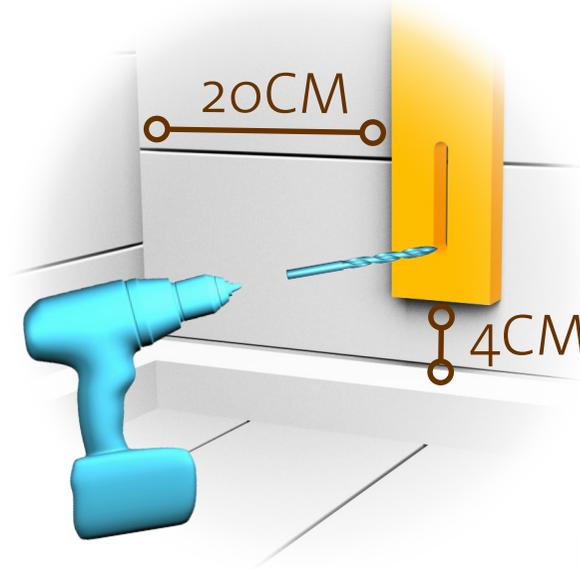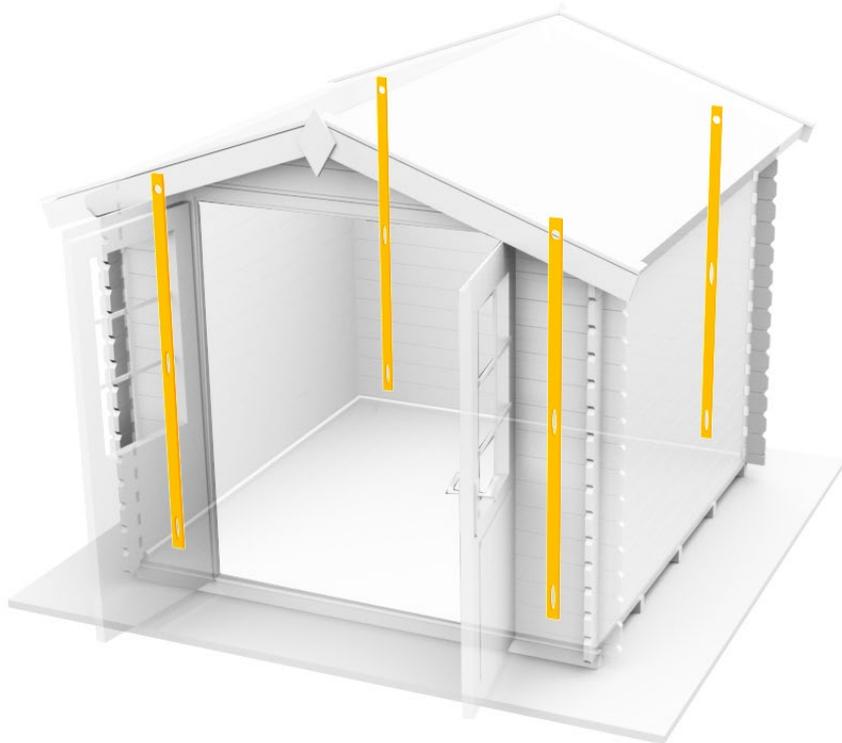




BENTE II 28

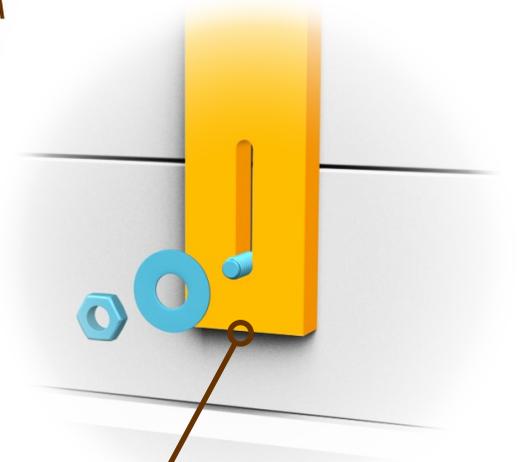

WINDBOARD


IF DOOR IS TILTED,
PUSH THE DOOR FRAME SO
THAT ALL CORNERS ARE 90° .

BENTE II 28

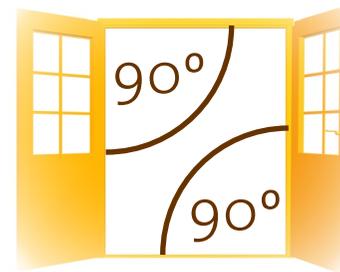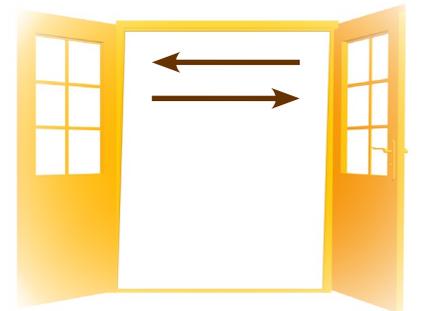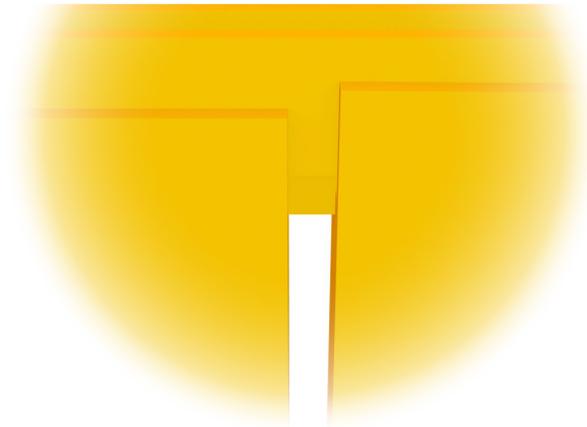

IF **DOORS** ARE IN DIFFERENT HEIGHTS OR THERE IS A GAP **BETWEEN** THEM, **ADJUST** 3 SCREWS ON DOOR HINGES.

BENTE II 28

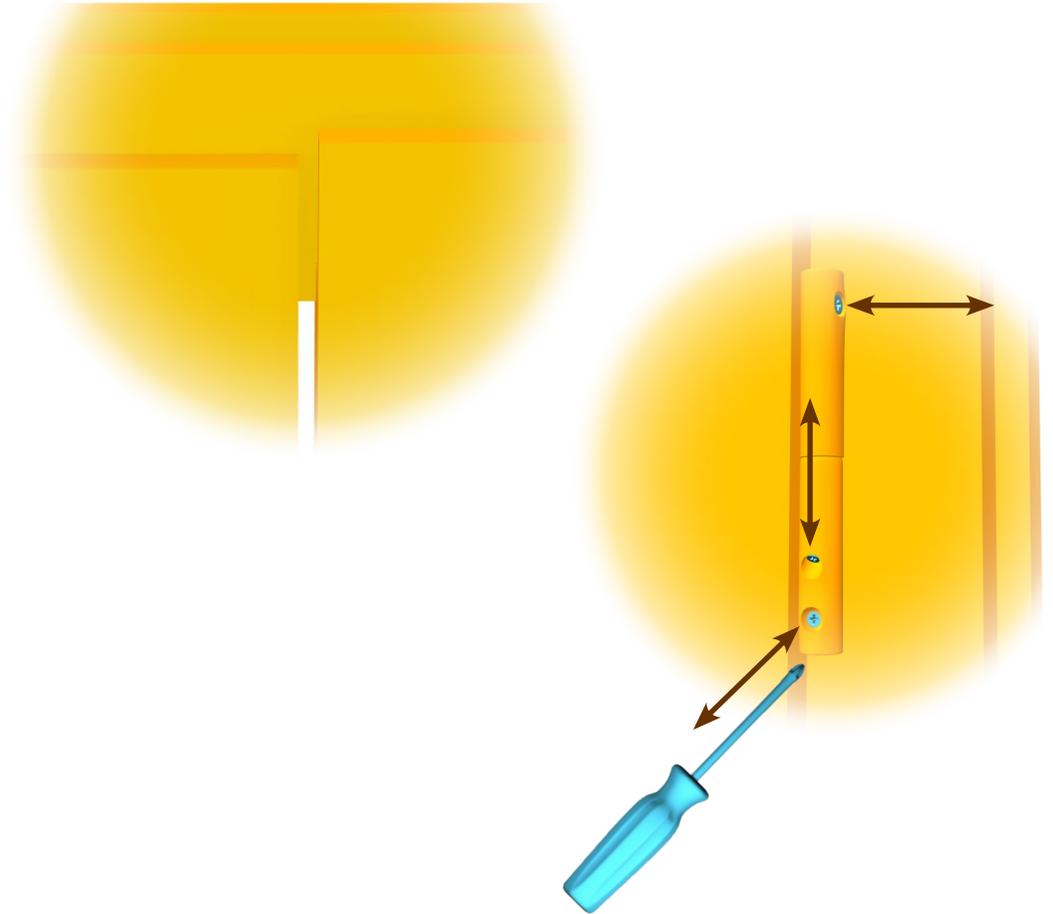

WHEN THE **HOUSE** IS ASSEMBLED, YOU SHOULD **COVER** THE TIMBER WITH **WOOD** PROTECTIVE SEAL, PAINT OR **STAIN** AS SOON AS POSSIBLE TO AVOID DETERIORATION TO THE **WOOD**.

BENTE II 28

